


WMB 91465

Washing Machine

User's Manual

Perilica rublja

Korisnički priručnik

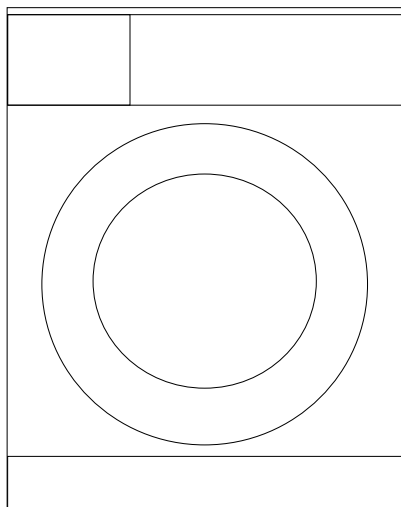

Document Number

2820522869_EN / 26-07-12.(14:12)

BEKO

1 Important instructions for safety and environment

This section contains safety instructions that will help protect from risk of personal injury or property damage. Failure to follow these instructions shall void any warranty.

1.1 General safety

- This product can be used by children at and above 8 years old and by persons whose physical, sensory or mental capabilities were not fully developed or who lack experience and knowledge provided that they are supervised or trained on the safe usage of the product and the risks it brings out. Children must not play with the product. Cleaning and maintenance works should not be performed by children unless they are supervised by someone.
- Never place the product on a carpet-covered floor. Otherwise, lack of airflow beneath the machine will cause electrical parts to overheat. This will cause problems with your product.
- If the product has a failure, it should not be operated unless it is repaired by the Authorized Service Agent. There is the risk of electric shock!
- This product is designed to resume operating in the event of powering on after a power interruption. If you wish to cancel the programme, see "Cancelling the programme" section.
- Connect the product to a grounded outlet protected by a 16 A fuse. Do not neglect to have the grounding installation made by a qualified electrician. Our company shall not be liable for any damages that will arise when the product is used without grounding in accordance with the local regulations.
- The water supply and draining hoses must be securely fastened and remain undamaged. Otherwise, there is the risk of water leakage.
- Never open the loading door or remove the filter while there is still water in the drum. Otherwise, risk of flooding and injury from hot water will occur.
- Do not force open the locked loading door. The loading door will be ready to open just a few minutes after the washing cycle comes to an end. In case of forcing the loading door to open, the door and the lock mechanism may get damaged.
- Unplug the product when not in use.
- Never wash the product by spreading or pouring water onto it! There is the risk of electric shock!
- Never touch the plug with wet hands! Never unplug by pulling on the cable, always pull out by grabbing the plug.
- Use detergents, softeners and supplements suitable for automatic washing machines only.
- Follow the instructions on the textile tags and on the detergent package.
- The product must be unplugged during installation, maintenance, cleaning and repairing procedures.
- Always have the installation and repairing procedures carried out by the **Authorized Service Agent**. Manufacturer shall not be held liable for damages that may arise from procedures carried out by unauthorized persons.
- If the power cable is damaged, it must be replaced by the manufacturer, after sales service or a similarly qualified

person (preferably an electrician) or someone designated by the importer in order to avoid possible risks.

1.2 Intended use

- This product has been designed for domestic use. It is not suitable for commercial use and it must not be used out of its intended use.
- The product must only be used for washing and rinsing of laundry that are marked accordingly.
- The manufacturer waives any responsibility arisen from incorrect usage or transportation.

1.3 Children's safety

- Packaging materials are dangerous to children. Keep packaging materials in a safe place away from reach of the children.
- Electrical products are dangerous for the children. Keep children away from the product when it is in use. Do not let them to tamper with the product. Use child lock to prevent children from intervening with the product.
- Do not forget to close the loading door when leaving the room where the product is located.
- Store all detergents and additives in a safe place away from the reach of the children by closing the cover of the detergent container or sealing the detergent package.

1.4 Package information

- Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

1.5 Disposing of the waste product

- This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Therefore, do not dispose the product with normal domestic waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic equipment. Please consult your local authorities to learn the nearest collection point. Help protect the environment and natural resources by recycling used products. For children's safety, cut the power cable and break the locking mechanism of the loading door so that it will be non-functional before disposing of the product.





1.6 Compliance with WEEE Directive



This appliance's packaging material is recyclable. Help recycle it and protect the environment by dropping it off in the municipal receptacles provided for this purpose. Your appliance also contains a great amount of recyclable material. It is marked with this label to indicate the used appliances that should not be mixed with other waste. This way, the appliance recycling organised by your manufacturer will be done under the best possible conditions, in compliance with European Directive 2002/96/EC on Waste Electrical and Electronic Equipment. Contact your town hall or your retailer for the used appliance collection points closest to your home. We thank you doing your part to protect the environment.

2 Installation

Refer to the nearest Authorised Service Agent for installation of the product. To make the product ready for use, review the information in the user manual and make sure that the electricity, tap water supply and water drainage systems are appropriate before calling the Authorized Service Agent. If they are not, call a qualified technician and plumber to have any necessary arrangements carried out.

| | |
|--|---|
|  | Preparation of the location and electrical, tap water and waste water installations at the place of installation is under customer's responsibility. |
|  | WARNING: Installation and electrical connections of the product must be carried out by the Authorized Service Agent. Manufacturer shall not be held liable for damages that may arise from procedures carried out by unauthorized persons. |
|  | WARNING: Prior to installation, visually check if the product has any defects on it. If so, do not have it installed. Damaged products cause risks for your safety. |
|  | Make sure that the water inlet and discharge hoses as well as the power cable are not folded, pinched or crushed while pushing the product into its place after installation or cleaning procedures. |

2.1 Appropriate installation location



- Place the machine on a rigid floor. Do not place it on a long pile rug or similar surfaces.
- Total weight of the washing machine and the dryer -with full load- when they are placed on top of each other reaches to approx. 180 kilograms. Place the product on a solid and flat floor that has sufficient load carrying capacity!
- Do not place the product on the power cable.
- Do not install the product at places where temperature may fall below 0°C.
- Place the product at least 1 cm away from the edges of other furniture.

2.2 Removing packaging reinforcement

Tilt the machine backwards to remove the packaging reinforcement. Remove the packaging reinforcement by pulling the ribbon.






2.3 Removing the transportation locks

| | |
|--|--|
|  | WARNING: Do not remove the transportation locks before taking out the packaging reinforcement. |
|  | WARNING: Remove the transportation safety bolts before operating the washing machine! Otherwise, the product will be damaged. |



 

1. Loosen all the bolts with a suitable spanner until they rotate freely (C).

2. Remove transportation safety bolts by turning them gently.
3. Attach the plastic covers supplied in the User Manual bag into the holes on the rear panel. (P)





| | |
|---|---|
|  | Keep the transportation safety bolts in a safe place to reuse when the washing machine needs to be moved again in the future. |
|  | Never move the product without the transportation safety bolts properly fixed in place! |

2.4 Connecting water supply


| | |
|---|---|
|  | The water supply pressure required to run the product is between 1 to 10 bars (0.1 – 1 MPa). It is necessary to have 10 – 80 liters of water flowing from the fully open tap in one minute to have your machine run smoothly. Attach a pressure reducing valve if water pressure is higher. |
|  | If you are going to use the double water-inlet product as a single (cold) water-inlet unit, you must install the supplied stopper to the hot water valve before operating the product. (Applies for the products supplied with a blind stopper group.) |
|  | WARNING: Models with a single water inlet should not be connected to the hot water tap. In such a case the laundry will get damaged or the product will switch to protection mode and will not operate. |
|  | WARNING: Do not use old or used water inlet hoses on the new product. It may cause stains on your laundry. |

1. Connect the special hoses supplied with the product to the water inlets on the product. Red hose (left) (max. 90 °C) is for hot water inlet, blue hose (right) (max. 25 °C) is for cold water inlet.

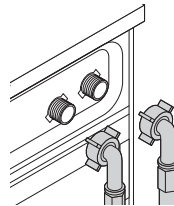

| | |
|---|--|
|  | WARNING: Ensure that the cold and hot water connections are made correctly when installing the product. Otherwise, your laundry will come out hot at the end of the washing process and wear out. |
|---|--|

2. Tighten all hose nuts by hand. Never use a tool when tightening the nuts.

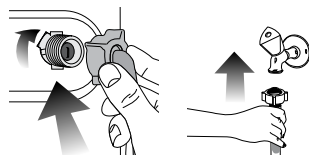

- Open the taps completely after making the hose connection to check for water leaks at the connection points. If any leaks occur, turn off the tap and remove the nut. Retighten the nut carefully after checking the seal. To prevent water leakages and damages caused by them, keep the taps closed when the machine is not in use.


2.5 Connecting to the drain

- The end of the drain hose must be directly connected to the wastewater drain or to the washbasin.



WARNING: Your house will be flooded if the hose comes out of its housing during water discharge. Moreover, there is risk of scalding due to high washing temperatures! To prevent such situations and to ensure smooth water intake and discharge of the machine, fix the end of the discharge hose tightly so that it cannot come out.

- The hose should be attached to a height of at least 40 cm, and 100 cm at most.
- In case the hose is elevated after laying it on the floor level or close to the ground (less than 40 cm above the ground), water discharge becomes more difficult and the laundry may come out excessively wet. Therefore, follow the heights described in the figure.

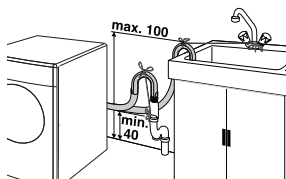


- To prevent flowing of dirty water back into the machine and to allow for easy discharge, do not immerse the hose end into the dirty water or do not drive it in the drain more than 15 cm. If it is too long, cut it short.
- The end of the hose should not be bent, it should not be stepped on and the hose must not be pinched between the drain and the machine.
- If the length of the hose is too short, use it by adding an original extension hose. Length of the hose may not be longer than 3.2 m. To avoid water leak failures, the connection between the extension hose and the drain hose of the product must be fitted well with an appropriate clamp as not to come off and leak.


2.6 Adjusting the feet



WARNING: In order to ensure that the product operates more silently and vibration-free, it must stand level and balanced on its feet. Balance the machine by adjusting the feet. Otherwise, the product may move from its place and cause crushing and vibration problems.

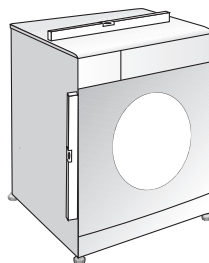

- Loosen the lock nuts on the feet by hand.
- Adjust the feet until the product stands level and balanced.
- Tighten all lock nuts again by hand.

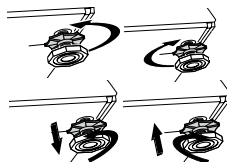

WARNING: Do not use any tools to loosen the lock nuts. Otherwise, they will get damaged.

2.7 Electrical connection

Connect the product to a grounded outlet protected by a 16 A fuse. Our company shall not be liable for any damages that will arise when the product is used without grounding in accordance with the local regulations.

- Connection must comply with national regulations.
- Power cable plug must be within easy reach after installation.
- If the current value of the fuse or breaker in the house is less than 16 Amps, have a qualified electrician install a 16 Amp fuse.
- The voltage specified in the "Technical specifications" section must be equal to your mains voltage.
- Do not make connections via extension cables or multi-plugs.



WARNING: Damaged power cables must be replaced by the Authorized Service Agents.

Transportation of the product

- Unplug the product before transporting it.
- Remove water drain and water supply connections.
- Drain all water that has remained in the product.
- Install transportation safety bolts in the reverse order of removal procedure;



Never move the product without the transportation safety bolts properly fixed in place!



WARNING: Packaging materials are dangerous to children. Keep packaging materials in a safe place away from reach of the children.

3 Preparation

3.1 Sorting the laundry

- Sort laundry according to type of fabric, colour, and degree of soiling and allowable water temperature.
- Always obey the instructions given on the garment tags.

3.2 Preparing laundry for washing

- Laundry items with metal attachments such as, underwired bras, belt buckles or metal buttons will damage the machine. Remove the metal pieces or wash the clothes by putting them in a laundry bag or pillow case.
- Take out all substances in the pockets such as coins, pens and paper clips, and turn pockets inside out and brush. Such objects may damage the product or cause noise problem.
- Put small size clothes such as infant's socks and nylon stockings in a laundry bag or pillow case.
- Place curtains in without compressing them. Remove curtain attachment items.
- Fasten zippers, sew loose buttons and mend rips and tears.
- Wash "machine washable" or "hand washable" labeled products only with an appropriate programme.
- Do not wash colours and whites together. New, dark coloured cottons release a lot of dye. Wash them separately.
- Tough stains must be treated properly before washing. If unsure, check with a dry cleaner.
- Use only dyes/colour changers and limescale removers suitable for machine wash. Always follow the instructions on the package.
- Wash trousers and delicate laundry turned inside out.
- Keep laundry items made of Angora wool in the freezer for a few hours before washing. This will reduce pilling.
- Laundry that are subjected to materials such as flour, lime dust, milk powder, etc. intensely must be shaken off before placing into the machine. Such dusts and powders on the laundry may build up on the inner parts of the machine in time and can cause damage.


3.3 Things to be done for energy saving

Following information will help you use the product in an ecological and energy-efficient manner.

- Operate the product in the highest capacity allowed by the programme you have selected, but do not overload; see, "Programme and consumption table".
- Always follow the instructions on the detergent packaging.
- Wash slightly soiled laundry at low temperatures.
- Use faster programmes for small quantities of lightly soiled laundry.
- Do not use prewash and high temperatures for laundry that is not heavily soiled or stained.
- If you plan to dry your laundry in a dryer, select the highest spin speed recommended during washing process.
- Do not use detergent in excess of the amount recommended on the detergent package.

3.4 Initial use

Before starting to use the product, make sure that all preparations are made in accordance with the instructions in sections "Important safety instructions" and "Installation". To prepare the product for washing laundry, perform first operation in Drum Cleaning programme. If your product is not equipped with Drum Cleaning programme, perform the Initial Use procedure in accordance with the methods described under "5.2 Cleaning the loading door and the drum" section of the user manual.

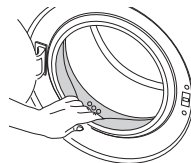

Use an anti-limescale suitable for the washing machines.



Some water might have remained in the product due to the quality control processes in the production. It is not harmful for the product.

3.5 Correct load capacity

The maximum load capacity depends on the type of laundry, the degree of soiling and the washing programme desired. The machine automatically adjusts the amount of water according to the weight of the loaded laundry.



WARNING: Follow the information in the "Programme and consumption table". When overloaded, machine's washing performance will drop. Moreover, noise and vibration problems may occur.

| Laundry type | Weight (g) |
|----------------|------------|
| Bathrobe | 1200 |
| Napkin | 100 |
| Duvet cover | 700 |
| Bed Sheet | 500 |
| Pillowcase | 200 |
| Tablecloth | 250 |
| Towel | 200 |
| Hand towel | 100 |
| Evening gown | 200 |
| Underclothing | 100 |
| Men's overalls | 600 |
| Men's shirt | 200 |
| Men's pajamas | 500 |
| Blouses | 100 |

3.6 Loading the laundry

1. Open the loading door.
2. Place laundry items loosely into the machine.
3. Push the loading door to close until you hear a locking sound. Ensure that no items are caught in the door.



The loading door is locked while a programme is running. The door can only be opened a while after the programme comes to an end.



WARNING: In case of misplacing the laundry, noise and vibration problems may occur in the machine.

3.7 Using detergent and softener




When using detergent, softener, starch, fabric dye, bleach or limescale remover read the manufacturer's instructions on the package carefully and follow the suggested dosage values. Use measuring cup if available.

Detergent Drawer

The detergent drawer is composed of three compartments:

- (1) for prewash
- (2) for main wash
- (3) for softener
- (*) in addition, there is siphon piece in the softener compartment.

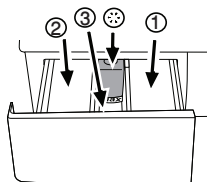

Detergent, softener and other cleaning agents

- Add detergent and softener before starting the washing programme.
- Never leave the detergent drawer open while the washing programme is running!
- When using a programme without prewash, do not put any detergent into the prewash compartment (compartment nr. "1").
- In a programme with prewash, do not put liquid detergent into the prewash compartment (compartment nr. "1").
- Do not select a programme with prewash if you are using a detergent bag or dispensing ball. Place the detergent bag or the dispensing ball directly among the laundry in the machine.
- If you are using liquid detergent, do not forget to place the liquid detergent cup into the main wash compartment (compartment nr. "2").

Choosing the detergent type

The type of detergent to be used depends on the type and colour of the fabric.

- Use different detergents for coloured and white laundry.
- Wash your delicate clothes only with special detergents (liquid detergent, wool shampoo, etc.) used solely for delicate clothes.
- When washing dark coloured clothes and quilts, it is recommended to use liquid detergent.
- Wash woollens with special detergent made specifically for woollens.



WARNING: Use only detergents manufactured specifically for washing machines.



WARNING: Do not use soap powder.

Adjusting detergent amount

The amount of washing detergent to be used depends on the amount of laundry, the degree of soiling and water hardness.

- Do not use amounts exceeding the dosage quantities recommended on the detergent package to avoid problems of excessive foam, poor rinsing, financial savings and finally, environmental protection.
- Use lesser detergent for small amounts or lightly soiled clothes.

Using softeners


Pour the softener into the softener compartment of the detergent drawer.

- Do not exceed the (>max<) level marking in the softener compartment.
- If the softener has lost its fluidity, dilute it with water before putting it in the detergent drawer.

Using liquid detergents

If the product contains a liquid detergent cup:

- Make sure that you have placed the liquid detergent cup in compartment nr. "2".
- If the liquid detergent has lost its fluidity, dilute it with water before putting in the detergent cup.

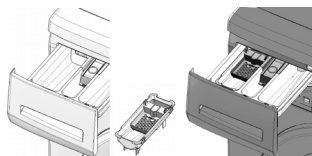

If the product does not contain a liquid detergent cup:

- Do not use liquid detergent for the prewash in a programme with prewash.
- Liquid detergent stains your clothes when used with Delayed Start function. If you are going to use the Delayed Start function, do not use liquid detergent.

Using gel and tablet detergent

Apply the following instructions when using tablet, gel and similar detergents.

- If the gel detergent thickness is fluidal and your machine does not contain a special liquid detergent cup, put the gel detergent into the main wash detergent compartment during first water intake. If your machine contains a liquid detergent cup, fill the detergent into this cup before starting the programme.
- If the gel detergent thickness is not fluidal or in the shape of capsule liquid tablet, put it directly into the drum before washing.
- Put tablet detergents into the main wash compartment (compartment nr. "2") or directly into the drum before washing.



Tablet detergents may leave residues in the detergent compartment. If you encounter such a case, place the tablet detergent between the laundry, close to the lower part of the drum in future washings.



Use the tablet or gel detergent without selecting the prewash function.

Using starch

- Add liquid starch, powder starch or the fabric dye into the softener compartment.
- Do not use softener and starch together in a washing cycle.
- Wipe the inside of the machine with a damp and clean cloth after using starch.

Using bleaches

- Select a programme with prewash and add the bleaching agent at the beginning of the prewash. Do not put detergent in the prewash compartment. As an alternative application, select a programme with extra rinse and add the bleaching agent while the machine is taking water from the detergent compartment during first rinsing step.
- Do not use bleaching agent and detergent by mixing them.
- Use just a little amount (approx. 50 ml) of bleaching agent and rinse the clothes very well as it causes skin irritation.

Do not pour the bleaching agent onto the clothes and do not use it for coloured clothes.

- When using oxygen based bleaches, select a programme that washes at a lower temperature.
- Oxygen based bleaches can be used together with detergents; however, if its thickness is not the same with the detergent, put the detergent first into the compartment nr. "2" in the detergent drawer and wait until the detergent flows while the machine is taking in water. Add the bleaching agent from the same compartment while the machine is still taking in water.

Using limescale remover


- When required, use limescale removers manufactured specifically for washing machines only.

3.8 Tips for efficient washing

| | | Clothes | | | |
|---------------|-----------------|--|--|---|--|
| | | Light colours and whites | Colours | Dark colours | Delicates/ Woolens/Silks |
| | | (Recommended temperature range based on soiling level: 40-90°C) | (Recommended temperature range based on soiling level: cold-40°C) | (Recommended temperature range based on soiling level: cold-40°C) | (Recommended temperature range based on soiling level: cold-30°C) |
| Soiling Level | Heavily Soiled | It may be necessary to pre-treat the stains or perform prewash. Powder and liquid detergents recommended for whites can be used at dosages recommended for heavily soiled clothes. It is recommended to use powder detergents to clean clay and soil stains and the stains that are sensitive to bleaches. | Powder and liquid detergents recommended for colours can be used at dosages recommended for heavily soiled clothes. It is recommended to use powder detergents to clean clay and soil stains and the stains that are sensitive to bleaches. Use detergents without bleach. | Liquid detergents suitable for colours and dark colours can be used at dosages recommended for heavily soiled clothes. | Prefer liquid detergents produced for delicate clothes. Woolen and silk clothes must be washed with special woolen detergents. |
| | Normally Soiled | Powder and liquid detergents recommended for whites can be used at dosages recommended for normally soiled clothes. | Powder and liquid detergents recommended for colours can be used at dosages recommended for normally soiled clothes. Use detergents without bleach. | Liquid detergents suitable for colours and dark colours can be used at dosages recommended for normally soiled clothes. | Prefer liquid detergents produced for delicate clothes. Woolen and silk clothes must be washed with special woolen detergents. |
| | Lightly Soiled | Powder and liquid detergents recommended for whites can be used at dosages recommended for lightly soiled clothes. | Powder and liquid detergents recommended for colours can be used at dosages recommended for lightly soiled clothes. Use detergents without bleach. | Liquid detergents suitable for colours and dark colours can be used at dosages recommended for lightly soiled clothes. | Prefer liquid detergents produced for delicate clothes. Woolen and silk clothes must be washed with special woolen detergents. |

4 Operating the product


4.1 Control panel

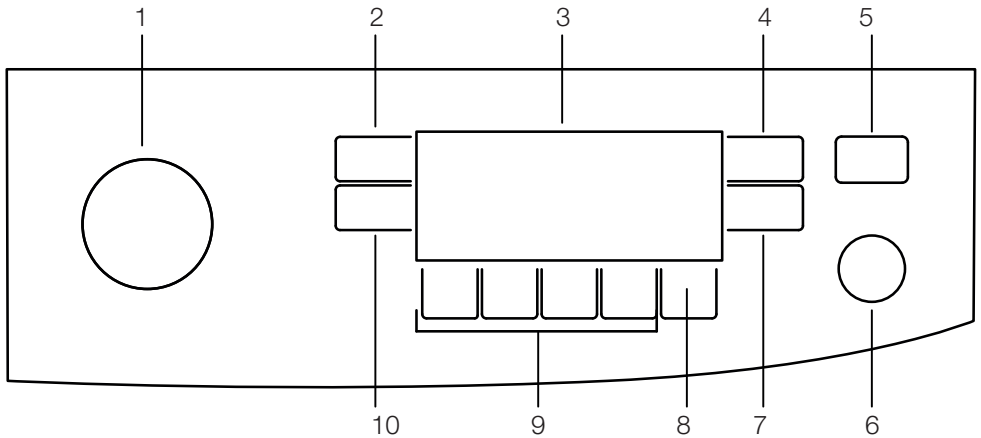

- 1 - Programme Selection knob
- 2 - Temperature Adjustment button
- 3 - Display
- 4 - Soiling Level Adjustment button
- 5 - Start / Pause button

- 6 - On / Off button
- 7 - End Time Adjustment button
- 8 - Favourite Programme button
- 9 - Auxiliary Function buttons
- 10 - Spin Speed Adjustment button

4.2 Display symbols

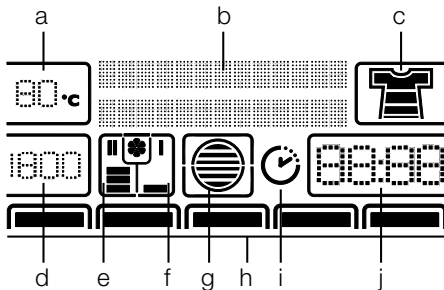

- a - Temperature indicator
- b - Information line
- c - Soiling Level indicator
- d - Spin speed indicator
- e - Main Wash Detergent Compartment indicator
- f - Prewash Detergent Compartment indicator
- g - Load indicator (displays the recommended amount of load)
- h - Auxiliary Function indicator
- i - End Time indicator
- j - Time indicator

4.3 Preparing the machine





1. Make sure that the hoses are connected tightly.
2. Plug in your machine.
3. Turn the tap on completely.
4. Place the laundry in the machine.
5. Add detergent and fabric softener.

4.4 Programme selection

1. Select the programme suitable for the type, quantity and soiling level of the laundry in accordance with the "Programme and consumption table" and the temperature table below.

| | |
|------------------------|--|
| 90°C | Heavily soiled white cottons and linens. (coffee table covers, tableclothes, towels, bed sheets, etc.) |
| 60°C | Normally soiled, coloured, fade proof linens, cottons or synthetic clothes (shirt, nightgown, pajamas, etc.) and lightly soiled white linens (underwear, etc.) |
| 40°C- 30°C- Cold | Blended laundry including delicate textile (veil curtains, etc.), synthetics and woolsens. |

2. Select the desired programme with the **Programme Selection** knob.

| | |
|--|--|
|  | Programmes are limited with the highest spin speed appropriate for that particular type of fabric. |
|  | When selecting a programme, always consider the type of fabric, colour, degree of soiling and permissible water temperature. |
|  | Always select the lowest required temperature. Higher temperature means higher power consumption. |
|  | For further programme details, see "Programme and consumption table" |

4.5 Main programmes

Depending on the type of fabric, use the following main programmes.

• Cottons

Use this programme for your cotton laundry (such as bed sheets, duvet and pillowcase sets, towels, bathrobes, underwear, etc.). Your laundry will be washed with vigorous washing action for a longer washing cycle.

• Synthetics

Use this programme to wash your synthetic clothes (shirts, blouses, synthetic/cotton blends, etc.). It washes with a gentle action and has a shorter washing cycle compared to the Cotton programme.

For curtains and tulle, use the Synthetic 40°C programme with prewash and anti-creasing functions selected. As their meshed texture causes excessive foaming, wash the veils/tulle by putting little amount of detergent into the main wash compartment. Do not put detergent in the prewash compartment.

• Woollens

Use this programme to wash your woolen clothes. Select the appropriate temperature complying with the tags of your clothes. Use appropriate detergents for woollens.



"The Wool wash cycle of this machine has been tested and approved by **The Woolmark Company** for the washing of Woolmark garments labelled as **"machine wash"** provided that the garments are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine.

• Automatic Programme

Use this programme to wash your frequently washable cotton, synthetic or blended (cotton+synthetic) clothes. Programme detects the type and quantity of the laundry to automatically adjust water consumption and programme time.



WARNING: Do not wash your woolen and delicate clothes in this programme.
If the temperature read on the temperature display does not conform to the garment's washing instructions, select a temperature in accordance with the washing instruction for the garment.

The maximum washing temperature in Automatic programme depending on the soiling level and laundry type is 60°C. Washing performance may not be at the desired level for heavily soiled whites and stubborn stains (collar, sock soil, perspiration stain, etc.). In this case, it is recommended to select Cottons programme with prewash and set the temperature to 50-60°C.

Many types of clothing are correctly detected and safely washed in Automatic programme.

Suitable clothes and the appropriate Automatic programme settings for washing them are shown in the table below.

| Type of laundry | Laundry content | Selectable temperature levels | Max. laundry amount |
|---|---|-------------------------------|---------------------|
| Home textiles (duvet cover, bed sheet, pillowcase, coverlet, towel, bathrobe, table cloth, hand cloth, napkin, couch cover, beach towel, etc.). | Cotton, lycra | Cold - 60 °C | Full capacity |
| Underwear (undershirts, panties/slips, boxers, etc.), socks, pajamas | Cotton, lycra | Cold - 60 °C | Full capacity |
| Shirts | Cotton, polyester, linen | Cold - 60 °C | 1/2 capacity |
| Knitted garments* (T-shirt, body, dress, lingerie, tights) | Cotton, polyamide (nylon), polyester, lycra | Cold - 40 °C | 1/2 capacity |
| Sportswear (Sweatshirt, track suit, shorts, etc.) | Cotton, polyamide (nylon), polyester, microfiber, lycra | Cold - 40 °C | 1/2 capacity |
| Jeans (trousers, jackets, vests, etc.) | Cotton, lycra | Cold - 40 °C | 1/2 capacity |
| Corduroy and canvas clothes (trousers, shirts, etc.) | Cotton, lycra | Cold - 40 °C | 1/2 capacity |
| Dark coloured clothes | Cotton, polyester, polyamide (nylon) | Cold - 40 °C | 1/2 capacity |

* Knitted clothes can easily shrink or stretch, crooked or pilled due to their elastic fabrics. Deformations on knitted fabrics are related with the quality of the cloth, and do not arise from washing programmes (Automatic or other washing programmes). Use "Sportswear" washing programme for knitted clothes.

Following table includes cloth types to be washed gently and some washing programmes suitable for some special clothes.

| Special laundry type | Laundry content | Recommended washing programme |
|---|--|---|
| Blouse, dress, skirt, foulard | Viscose, modal, rayon, tencel, lyocell, angora | Hand Wash |
| Knitted, dress | Wool, acrylic | Woolens |
| Pullover, cardigan, vest, scarf, beret, socks, etc. | Wool, acrylic, cashmere | Woolens |
| Blouse, dress, scarf, foulard | Silk, cashmere | Lingerie |
| Satin lingerie, lace clothing, bra | Silk, polyester, polyamide | Lingerie |
| Fabric trousers, skirt, dress | Polyester | Hand Wash |
| Featured sportswear (water and windproof clothes) | Polyester, polyamide | Sportswear |
| Tulle curtain | Polyester, polyamide | Curtain |
| Fiber duvet | Fiber | Bedding |
| Heavily soiled clothes (aprons, children's wear) | Cotton, polyester | Hygiene + Prewash (with high temperature selection) |
| Baby dresses | Cottons | Hygiene |

4.6 Additional programmes

For special cases, additional programmes are available in the machine.

• Cotton Economic

Use this programme to wash your normally soiled, durable cotton and linen laundry. Although it washes longer than all other programmes, it provides high energy and water savings. Actual water temperature may be different from the stated wash temperature. When you load the machine with less laundry (e.g. ½ capacity or less), programme time may automatically get shorter in the later stages. In this case, energy and water consumption will decrease more, providing a more economic wash. This programme is available in the models with the remaining time indicator.

• BabyProtect+

Use this programme for your laundry for which you require an anti-allergic and hygienic washing at high temperature with intensive and long washing cycles.

• Babyprotect+ 60°C programme is tested and approved by “The British Allergy Foundation” (Allergy UK) in United Kingdom.

• Hand wash

Use this programme to wash your woolen/delicate clothes that bear “not machine-washable” tags and for which hand wash is recommended. It washes laundry with a very gentle washing action to not to damage clothes.

• Daily express

Use this programme to wash your lightly soiled cotton clothes in a short time.

• Super short express

Use this programme to wash your little amount of lightly soiled cotton clothes in a short time.

• Darkcare

Use this programme to wash your dark coloured laundry or the laundry that you do not want it get faded. Washing is performed with little mechanic action and at low temperatures. It is recommended to use liquid detergent or woolen shampoo for dark coloured laundry.

• Shirts

Use this programme to wash the shirts made of cotton, synthetic and synthetic blended fabrics together.

• Curtain

Use this programme to wash your tulles and curtains. Thanks to the special spin profile of the programme, tulles and curtains crease lesser.


As their meshed texture causes excessive foaming, wash the veils/tulle by putting little amount of detergent into the main wash compartment. Do not put detergent in the prewash compartment. Prewash is used to clean the dirt (dust, sooth, etc.) on the tulles / curtains that can be removed easily.






It is suggested to use recommended detergents for curtains in this programme.

• Duvet (Bedding)

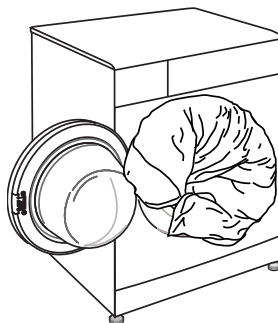Use this programme to wash your fiber duvets that bear "machine washable" tag. Make sure that you have loaded the duvet correctly in order not to damage the machine and the duvet. Remove the duvet cover before loading the duvet into the machine. Fold the duvet into two and load it into the machine. Load the duvet into the machine paying attention to place it in a way that it will not contact the bellow.



| | |
|--|--|
|  | Do not load more than 1 double fibre duvet (200 x 200 cm). |
|  | Do not wash your duvets, pillows and etc. that contain cotton in the machine. |
|  | WARNING: Do not wash the items apart from duvets such as carpets, rugs and etc. in the machine. Permanent damage occurs in the machine. |

• Freshen Up

Use this programme to remove the odour on the laundry that are worn only for once and do not contain any stains or dirt. You can also use this programme to moisten the rumpled shirts and open their creases.

4.7 Special programmes

For specific applications, select any of the following programmes.

• Rinse

Use this programme when you want to rinse or starch separately.


• Spin + Drain

Use this programme to drain the water in the machine.

4.8 Temperature selection

Whenever a new programme is selected, the recommended temperature for the programme appears on the temperature indicator. It is possible that the recommended temperature value is not the maximum temperature that can be selected for the current programme.


Depending on the temperature you have selected, “**Low Efficient**”, “**Efficient**” or “**High Efficient**” appears on the display.

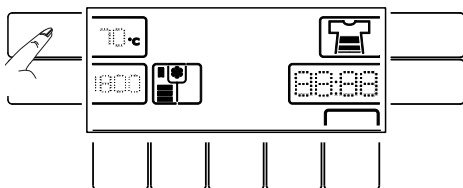


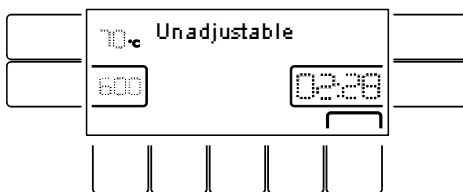
Press the **Temperature Adjustment** button to change the temperature. Temperature will decrease by steps of 10 °C.

| | |
|--|---|
|  | Temperature Adjustment button only serves for decreasing the temperature. |
|--|---|


Finally, “-” symbol indicating the cold wash option appears on the display. “Cold Wash” appears on the display.

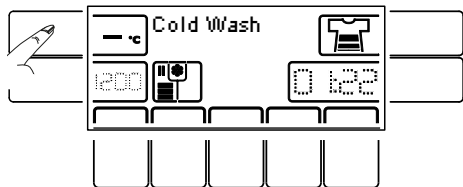

| | |
|--|--|
|  | The frame of temperature indicator is off in the programmes that do not allow temperature adjustment. When you press the Temperature Adjustment button, “Unadjustable” appears on the display. |
|--|--|




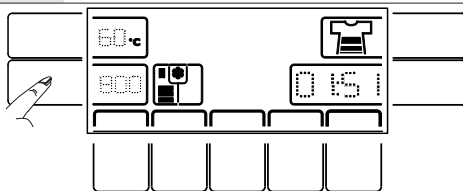
You can also change the temperature after the washing starts. If the Temperature indicator's frame is illuminated after the wash cycle has started, you can select the desired temperature. If the wash cycle has reached a point where you cannot change the temperature, the frame of temperature indicator turns off.

| | |
|---|--|
|  | If you scroll to cold wash option and press Temperature Adjustment button again, the recommended maximum temperature for the selected programme appears on the display. Press the Temperature Adjustment button again to decrease the temperature. |
|---|--|



4.9 Selecting the spin speed

Whenever a new programme is selected, the recommended spin speed of the selected programme is displayed on the **Spin Speed** indicator.

| | |
|---|--|
|  | It is possible that the recommended spin speed value is not the maximum spin speed that can be selected for the current programme. |
|---|--|




Press the **Spin Speed Adjustment** button to change the spin speed. Spin speed decreases gradually. Then, depending on the model of the product, “Rinse Hold” and “No Spin” options appear on the display.

| | |
|---|---|
|  | Spin Speed Adjustment button only serves for decreasing the spin speed. |
|  | Rinse Hold option is indicated with “_” symbol and No Spin option is indicated with “_” symbol. |

If you are not going to unload your laundry immediately after the programme completes, you can use **Rinse Hold** function in order to prevent them from getting wrinkled when there is no water in the machine.


This function holds the laundry in the final rinsing water.

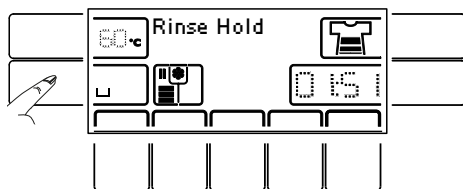

If you want to spin your laundry after the Rinse Hold function:

- Adjust the **Spin Speed**.
- Press **Start / Pause / Cancel** button. The programme resumes. Machine discharges the water and spins the laundry.

If you want to discharge the water at the end of the programme without spinning, use **No Spin** function.

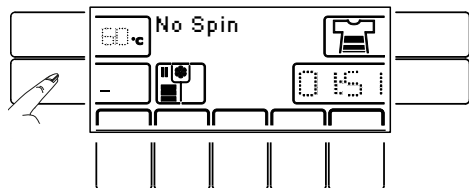

Frame of the Spin Speed indicator is off in the programmes that do not allow the adjustment of spin speed. When you press the **Spin Speed Adjustment** button, "Unadjustable" appears on the display.

You can also change the Spin Speed after the washing starts. If the Spin Speed indicator's frame is illuminated after the wash cycle has started, you can select the desired spin speed. If the wash cycle has reached a point where you cannot change the spin speed, the frame of spin speed indicator turns off.


4.10 Soiling level selection

Whenever a new programme is selected, the soiling level recommended for that programme appears on the Soiling Level indicator. To change the soiling level, press the **Soiling Level Adjustment** button.



Soiling Level Adjustment button only serves for decreasing the soiling level.

Single line means "lightly soiled", double lines "moderately soiled", and three lines "heavily soiled".

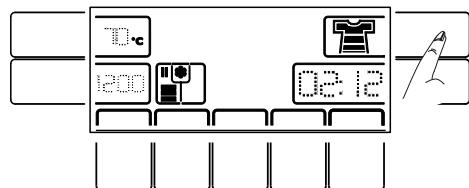

If the user attempts to select a soiling level, which is not suitable for the selected programme, "Unadjustable" appears on the display.

4.11 Programme and consumption table

| EN | | | | | | Auxiliary functions | | | | |
|---------------------|------|----------------|-----------------------|--------------------------|---------------|---------------------|------------|------------|---------------|---------------------------------|
| Programme (°C) | | Max. Load (kg) | Water Consumption (l) | Energy Consumption (kWh) | Max. Speed*** | Prewash | Night mode | Rinse Plus | Anti-Creasing | Selectable temperature range °C |
| Automatic Programme | 40 | 9 | **** | **** | 1600 | • | • | • | • | Cold-60 |
| Cotton Economic | 60** | 9 | 54 | 0.85 | 1600 | | | | | Cold-60 |
| Cotton Economic | 60** | 4.5 | 44 | 0.70 | 1600 | | | | | Cold-60 |
| Cotton Economic | 40** | 4.5 | 44 | 0.68 | 1600 | | | | | Cold-60 |
| Cottons | 90 | 9 | 70 | 2.20 | 1600 | • | • | • | • | Cold-90 |
| Cottons | 60 | 9 | 70 | 1.50 | 1600 | • | • | • | • | Cold-90 |
| Cottons | 40 | 9 | 70 | 1.00 | 1600 | • | • | • | • | Cold-90 |
| Synthetics | 60 | 4 | 65 | 1.13 | 1000 | • | • | • | • | Cold-60 |
| Synthetics | 40 | 4 | 65 | 0.90 | 1000 | • | • | • | • | Cold-60 |
| Shirts | 60 | 4 | 85 | 1.29 | 800 | • | | • | * | Cold-60 |
| Woollens | 40 | 2 | 45 | 0.35 | 1000 | | • | • | | Cold-40 |
| Hand wash | 30 | 1.5 | 40 | 0.22 | 1000 | | | • | | Cold-30 |
| Super short express | 30 | 2 | 34 | 0.81 | 1400 | | • | • | | Cold-30 |
| Daily express | 90 | 9 | 62 | 2.04 | 1400 | | • | • | | Cold-90 |
| Daily express | 60 | 9 | 64 | 1.06 | 1400 | | • | • | | Cold-90 |
| Daily express | 30 | 9 | 58 | 0.17 | 1400 | | • | • | | Cold-90 |
| BabyProtect+ | 90 | 8 | 100 | 2.50 | 1600 | | | * | | 30 - 90 |
| Duvet (Bedding) | 40 | - | 67 | 0.82 | 1000 | | • | • | | Cold-60 |
| Freshen Up | - | 1 | 1 | 0.17 | - | | | | | - |
| Darkcare | 40 | 4 | 80 | 0.90 | 1000 | • | • | * | • | Cold-40 |
| Curtain | 30 | 2 | 68 | 0.48 | 800 | * | | * | * | Cold-40 |

• : Selectable.

* : Automatically selected, no canceling.

** : Energy Label programme (EN 60456 Ed.3)

*** : "Cotton eco 40°C and Cotton eco 60°C are the standard programmes." These programmes are referred to as 'standard 40°C cotton programme' and 'standard 60°C cotton programme'

****: If maximum spin speed of the machine is lower then this value, you can only select up to the maximum spin speed.

*****: Programme detects the type and quantity of the laundry to automatically adjust water and energy consumption and programme time.

- : See the programme description for maximum load.



The auxiliary functions in the table may vary according to the model of your machine.




Water and power consumption may vary subject to the changes in water pressure, water hardness and temperature, ambient temperature, type and amount of laundry, selection of auxiliary functions and spin speed, and changes in electric voltage.




You can see the washing time of the programme you have selected on the display of the machine. It is normal that small differences may occur between the time shown on the display and the real washing time.

4.12 Auxiliary function selection

Select the desired auxiliary functions before starting the programme. Whenever a programme is selected, frames of the auxiliary function symbol that can be selected together with it illuminates. And when you select an auxiliary function, the interior area of the auxiliary function symbol also starts to illuminate and the name of the selected function appears on display for 3 seconds.

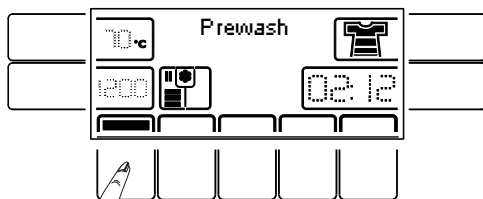

i Frame of the auxiliary function symbol that cannot be selected with the current programme does not illuminate. When you press the button of such auxiliary functions, "Unadjustable" appears on the display for 3 seconds.

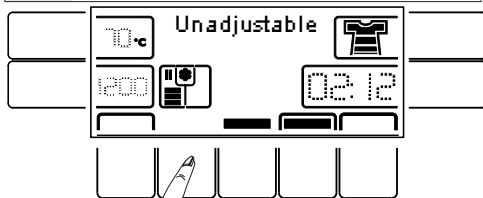

Also the frames of the auxiliary function suitable for the current programme after the washing has started remains illuminated. You can select or cancel the auxiliary functions whose frames are illuminated. If the wash cycle has reached a point where you cannot select the auxiliary function, the function's frame turns off.

i Some functions cannot be selected together. If a second auxiliary function conflicting with the first one is selected before starting the machine, the function selected first will be canceled and the second auxiliary function selection will remain active. For example, if you want to select Quick Wash after you have selected the Prewash, Prewash will be canceled and Quick Wash will remain active.

i An auxiliary function that is not compatible with the programme cannot be selected. (See "Programme and consumption table")

i Some programmes have auxiliary functions that must be operated simultaneously. Those functions cannot be cancelled. The frame of the auxiliary function will not be illuminated, only inner area will be illuminated.

• Prewash

A Prewash is only worthwhile for heavily soiled laundry. Not using the Prewash will save energy, water, detergent and time.

• Rinse Plus

This function enables the machine to make another rinsing in addition to the one already made after the main wash. Thus, the risk for sensitive skins (babies, allergic skins, etc.) to be effected by the minimal detergent remnants on the

laundry can be reduced.

• Anti-Creasing

This function creases the clothes lesser when they are being washed. Drum movement is reduced and spin speed is limited to prevent creasing. In addition, washing is done with a higher water level.


• Night mode

Use this programme to wash the cottons with lesser energy consumption and silently. Spin steps are cancelled for a silent washing and the cycle ends with the Rinse Hold step. After completion of the programme, run Spin cycle to spin the laundry.

4.13 Recommendations for the amount of laundry and detergent


The amount of loaded laundry is measured when the loading door is open and the Load indicator shows the amount. Depending on the amount of laundry you have loaded, "Low Efficient", "Efficient" or "High Efficient" appears on the display.

This information disappears when the loading door is closed.

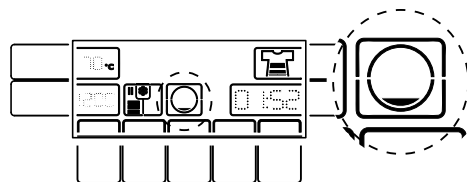

The detergent indicator shows the recommended amount of detergent according to the selected programme, soiling level and the amount of loaded laundry.

One line corresponds to a full powder detergent measurement cup supplied with your product.

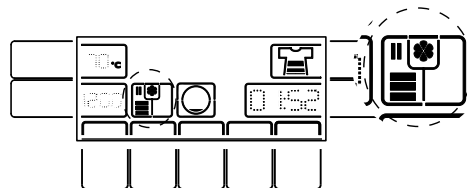

If you use liquid detergent, follow the amounts recommended by the detergent manufacturer on basis of the soiling level.

i Recommended detergent amount is not displayed after the programme has started.


Time display

Remaining time for the completion of the programme while it is running is displayed as "01:30" in hours and minutes format.


i Programme time may differ from the values in the "Programme and consumption table" depending on the water pressure, water hardness and temperature, ambient temperature, amount and the type of laundry, auxiliary functions selected and the changes at the mains voltage.

4.14 End Time

With the **End Time** function, the startup of the programme may be delayed up to 24 hours. After pressing **End Time** button, the programme's estimated ending time is displayed. If the **End Time** is adjusted, **End Time** indicator is illuminated. "**End Time Setting**" appears on the display. Meantime, **Start / Pause** button flashes.

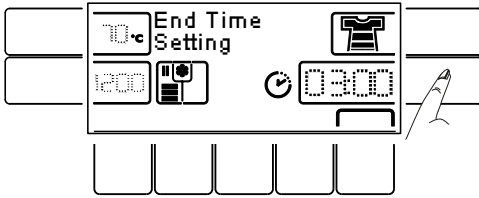

In order for the End Time function is activated and the programme is completed at the end of the specified time, you must press **Start / Pause** button after adjusting the time. "**End Time Enabled**" appears on the display when you press the button. **Start / Pause** button stops flashing and remains illuminated continuously.

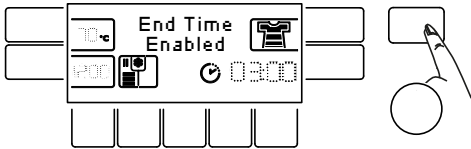

If you want to cancel End Time function, press End Time button until the End Time indicator turns off or press **On / Off** button to turn off and on the machine.



Do not use liquid detergents when you activate End Time function! There is the risk of staining of the clothes.

1. Open the loading door, place the laundry and put detergent, etc.
2. Select the washing programme, temperature, spin speed and, if required, the auxiliary functions.
3. Set the end time of your choice by pressing the **End Time** button. **End Time** indicator illuminates.
4. Press **Start / Pause** button. Time countdown starts. "·" sign in the middle of the end time on the display starts flashing.




Additional laundry may be loaded during the End Time countdown period. At the end of the countdown, End Time indicator turns off, washing cycle starts and the time of the selected programme appears on the display.




When the End Time selection is completed, the time appears on the screen consists of end time plus the duration of the selected programme.

4.15 Starting the programme


1. Press **Start / Pause** button to start the programme.
2. The **Start / Pause** button which was flashing starts to illuminate steadily now, indicating that the programme has started. "**Programme starts**" appears on the display for 3 seconds.

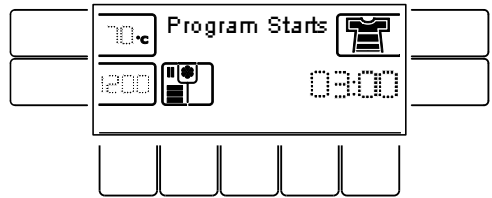

3. Loading door is locked. "Locking Door" appears on the display when the door is being locked.

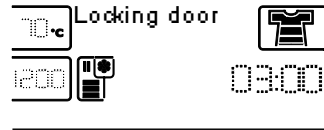

4. Programme step is indicated on the display.

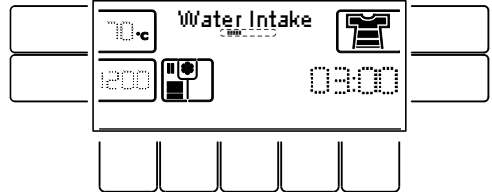

4.16 Loading door lock


There is a locking system on the loading door of the machine that prevents opening of the door in cases when the water level is unsuitable.

"Door Locked" appears on the display when the loading door is locked.

4.17 Changing the selections after programme has started

Adding laundry after the programme has started:


If the water level in the machine is suitable when you press **Start / Pause** button, "Opening door" will appear on the display.

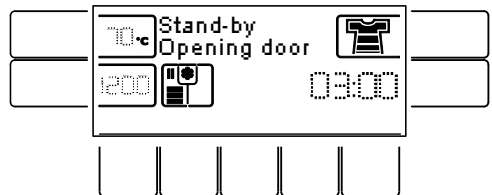

If the **water** level in the machine is not suitable when you press **Start / Pause** button, the display will show that the loading door is locked.

Switching the machine to pause mode:

Press the **Start / Pause** button to switch the machine to pause mode. The frame around the **Start / Pause** button starts flashing. "Stand-by" appears on the display.

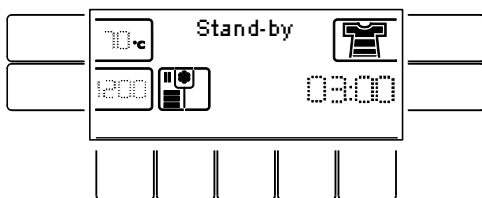

Changing the programme selection after programme has started:

The programme change is not allowed when the current programme is running.

If you turn the **Programme Selection** knob while the programme is running, "To Make Changes Switch to Standby" appears on the display.

You can select the new programme after switching the current programme to standby.

i The selected program starts anew.

Changing the auxiliary function, speed and temperature

Depending on the step the programme has reached, you can cancel or activate the auxiliary functions; see, "Auxiliary function selection".

You can also change the speed and temperature settings; see, "Spin speed selection" and "Temperature selection".

i The loading door will not open if the water temperature in the machine is high or the water level is above the door opening.

4.18 Child Lock


Use Child Lock function to prevent children from tampering with the machine. Thus you can avoid any changes in a running programme.

i You can switch on and off the machine with **On / Off** button when the Child Lock is active. When you switch on the machine again, programme will resume from where it has stopped.

i If you press any button when the Child Lock is activated, the machine will give an audio warning. After pressing the buttons for 5 times consecutively, audio warning will not be given but the warning on the display will remain active.

To activate the Child Lock:


Press and hold 2nd and 4th Auxiliary Function buttons for 3 seconds. After the countdown as "Child Lock 3-2-1" on the display is over, "Child Lock Enabled" appears on the display. You can release 2nd and 4th Auxiliary Function buttons when this warning is displayed.

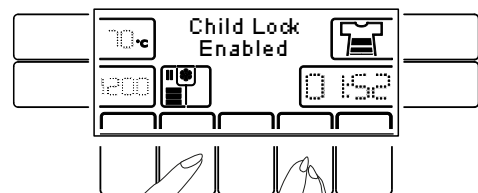

i "Child Lock Enabled" appears on the display if you press any button when Child Lock is enabled.

To deactivate the Child Lock:

Press and hold 2nd and 4th Auxiliary Function buttons for 3 seconds. After the countdown as "Child Lock 3-2-1" on the display is over, "Child Lock Disabled" appears on the display.

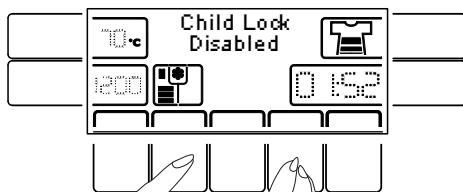

4.19 Cancelling the programme

The programme is cancelled when the machine is turned off and on again. Press and hold **On / Off** button for 3 seconds. After the countdown as "Cancel 3-2-1" on the display is over, the machine turns off.

i If you press **On / Off** button when the Child Lock is enabled, the programme will not be cancelled. You should cancel the Child Lock first. Countdown as "Standby 3-2-1" appears on the display.

i If you want to open the loading door after you have cancelled the programme but it is not possible to open the loading door since the water level in the machine is above the loading door opening, then turn the **Programme Selection** knob to **Pump+Spin** programme and discharge the water in the machine.

4.20 End of programme

"Laundry can be taken out" appears on the display when the programme is completed.

If you do not press any button for 2 minutes, the machine will switch to standby mode. Display and all indicators are turned off. Only the frame of the **Programme Selection** knob remains flashing.

If you press any button or turn the **Programme Selection** knob when the machine is in standby mode, programme steps that are completed will appear on the display.



4.21 Favourite program setting

You can create a favourite programme by saving frequently used programme and other settings. Use this function when you want to select quickly the same settings you use for the laundry that you wash regularly.

Favourite programme will remain at the factory set programme until you make a new favourite programme setting.


To store a new favourite programme:

1. Select the desired programme, temperature, spin speed, soiling degree and auxiliary function.
2. Keep the **Favourite** button pressed for 3 seconds.
3. Countdown as "Storing favourite 3-2-1" appears on the display.

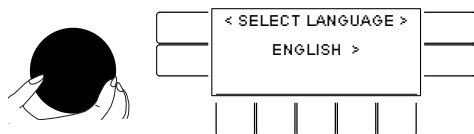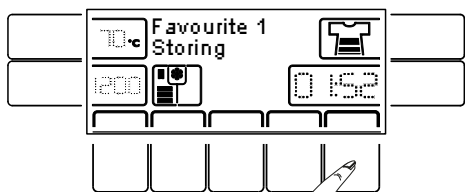

- Press the button of the empty box on the lower right corner of the display when the desired language is displayed.

Empty box gets filled and "Language Set" appears on the display.

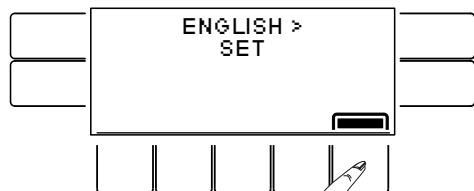

Changing the screen brightness setting

- Press **Temperature Adjustment** button and **Spin Speed Adjustment** button simultaneously for 3 seconds to enter the Settings menu. Press **Soiling Degree** or **Temperature** button to open "Brightness" menu.



- Turn the **Programme Selection** knob until the desired brightness option appears on the display in Brightness menu.
- Press the button of the empty box on the lower right corner of the display when the desired brightness level is displayed. Empty box gets filled and "Brightness Set" appears on the display.




Muting and unmuting the sound

- Press **Temperature Adjustment** button and **Spin Speed Adjustment** button simultaneously for 3 seconds to enter the Settings menu. Press **Soiling Degree** or **Temperature Adjustment** button to open "Sound Setting" menu.

i If storing is not successful, "Favourite not saved" appears on the display.

To select a favourite programme:

- Press **Favourite** button. "Favourite selected" appears on the display.
- Programme and other settings saved as favourite appear on the display.
- Press **Start / Pause** button to start the Favourite programme.

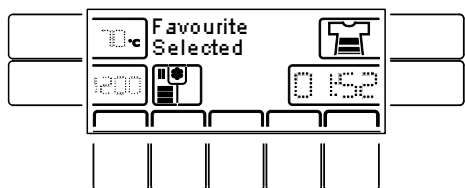

4.22 Entering the Settings menu

You can perform the following operations in Settings menu:

- Changing the language selection,
- Changing the screen brightness setting,
- Muting and unmuting the sound,
- Restoring the factory settings.

Press **Temperature Adjustment** button and **Spin Speed Adjustment** button simultaneously for 3 seconds to enter the Settings menu. "Select Language" menu appears on the display.


Use **Soiling Level** and **Temperature Adjustment** buttons to navigate in menus.

Changing the language selection

- Press **Temperature Adjustment** button and **Spin Speed Adjustment** button simultaneously for 3 seconds to enter the Settings menu. "Select Language" menu is the first menu to appear on the display.



- Turn the **Programme Selection** knob until the desired language appears on the display in Select Language menu.

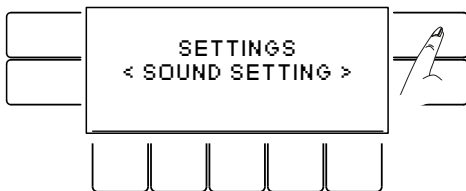


2. Turn the **Programme Selection** knob until the desired sound option appears on the display in Sound Setting menu.
3. If you want to unmute the sound, press the button of the empty box on the lower right corner of the display when "SOUND SETTING ON" is selected. Empty box gets filled and "Sound Set" appears on the display.
4. If you want to mute the sound, press the button of the empty box on the lower right corner of the display when "SOUND SETTING OFF" is selected. Empty box gets filled and "Turned Off" appears on the display.


Restoring the factory settings

When the factory settings are restored:

- Display language will return to the first language you selected when you have operated your machine for the first time;
 - Brightness is set to maximum level,
 - Sound is unmuted,
 - Favourite **programme selection** is returned to factory settings.
1. Press **Temperature Adjustment** button and **Spin Speed Adjustment** button simultaneously for 3 seconds to enter the Settings menu. Press Soiling Degree or Temperature button to open "FACTORY SETTINGS" menu.

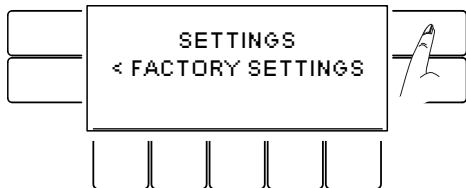

2. To restore factory settings, turn the **Programme Selection** knob until "Factory Settings" appears on the display.

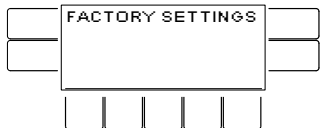


3. Press the button of the empty box on the lower right corner of the display. Factory settings will be restored.

5 Maintenance and cleaning

Service life of the product extends and frequently faced problems decrease if cleaned at regular intervals.

5.1 Cleaning the detergent drawer

Clean the detergent drawer at regular intervals (every 4-5 washing cycles) as shown below in order to prevent accumulation of powder detergent in time.

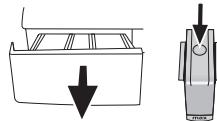

1. Press the dotted point on the siphon in the softener compartment and pull towards you until the compartment is removed from the machine.



If more than normal amount of water and softener mixture starts to gather in the softener compartment, the siphon must be cleaned.

2. Wash the detergent drawer and the siphon with plenty of lukewarm water in a washbasin. Wear protective gloves or use an appropriate brush to avoid touching of the residues in the drawer with your skin when cleaning.
3. Insert the drawer back into its place after cleaning and make sure that it is seated well.

5.2 Cleaning the loading door and the drum

Residues of softener, detergent and dirt may accumulate in your machine in time and may cause unpleasant odours and washing complaints. To avoid this, use the **Drum Cleaning** programme. If your machine is not featured with **Drum Cleaning** programme, use Cottons-90 programme and select **Additional Water** or **Extra Rinse** auxiliary functions as well. Run the programme without any laundry in the machine. Before starting the programme, put max. 100 g of powder anti-limescale into the main wash detergent compartment (compartment nr. 2). If the anti-limescale is in tablet form, put only one tablet into compartment nr. 2. Dry the inside of the bellow with a clean piece of cloth after the programme has come to an end.




Repeat Drum Cleaning process in every 2 months.



Use an anti-limescale suitable for the washing machines.

After every washing make sure that no foreign substance is left in the drum.

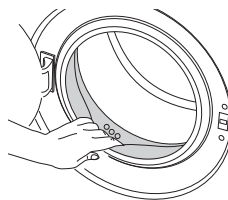

If the holes on the bellow shown in the figure is blocked, open the holes using a toothpick.



Foreign metal substances will cause rust stains in the drum. Clean the stains on the drum surface by using cleaning agents for stainless steel. Never use steel wool or wire wool.



WARNING: Never use sponge or scrub materials. These will damage the painted and plastic surfaces.


5.3 Cleaning the body and control panel

Wipe the body of the machine with soapy water or non-corrosive mild gel detergents as necessary, and dry with a soft cloth.

Use only a soft and damp cloth to clean the control panel.

5.4 Cleaning the water intake filters

There is a filter at the end of each water intake valve at the rear of the machine and also at the end of each water intake hose where they are connected to the tap. These filters prevent foreign substances and dirt in the water to enter the washing machine. Filters should be cleaned as they do get dirty.

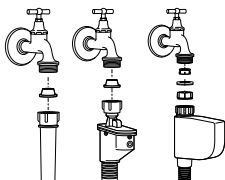

1. Close the taps.
2. Remove the nuts of the water intake hoses to access the filters on the water intake valves. Clean them with an appropriate brush. If the filters are too dirty, take them out by means of pliers and clean them.
3. Take out the filters on the flat ends of the water intake hoses together with the gaskets and clean thoroughly under running water.
4. Replace the gaskets and filters carefully in their places and tighten the hose nuts by hand.

5.5 Draining remaining water and cleaning the pump filter

The filter system in your machine prevents solid items such as buttons, coins and fabric fibers clogging the pump impeller during discharge of washing water. Thus, the water will be discharged without any problem and the service life of the pump will extend.

If the machine fails to drain water, the pump filter is clogged. Filter must be cleaned whenever it is clogged or in every 3 months. Water must be drained off first to clean the pump filter.

In addition, prior to transporting the machine (e.g., when moving to another house) and in case of freezing of the water, water may have to be drained completely.



WARNING: Foreign substances left in the pump filter may damage your machine or may cause noise problem.

In order to clean the dirty filter and discharge the water:


1. Unplug the machine to cut off the supply power.




WARNING: Temperature of the water inside the machine may rise up to 90 °C. To avoid burning risk, filter must be cleaned after the water in the machine cools down.

2. Open the filter cap.

If the filter cap is composed of two pieces, press the tab on the filter cap downwards and pull the piece out towards yourself.

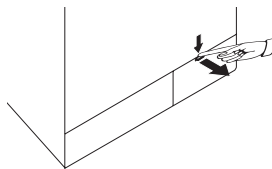


If the filter cap is one piece, pull the cap from both sides at the top to open.

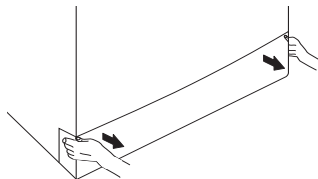


You can remove the filter cover by slightly pushing downwards with a thin plastic tipped tool, through the gap above the filter cover. Do not use metal tipped tools to remove the cover.

3. Some of our products have emergency draining hose and some does not have. Follow the steps below to discharge the water.

Discharging the water when the product has an emergency draining hose:

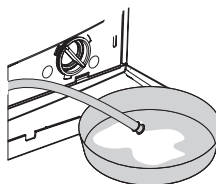


- a. Pull the emergency draining hose out from its seat
 - b. Place a large container at the end of the hose. Drain the water into the container by pulling out the plug at the end of the hose. When the container is full, block the inlet of the hose by replacing the plug. After the container is emptied, repeat the above procedure to drain the water in the machine completely.
 - c. When draining of water is finished, close the end by the plug again and fix the hose in its place.
 - d. Turn the pump filter to take it out.
- Discharging the water when the product does not have an emergency draining hose:

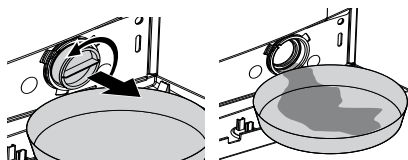



- a. Place a large container in front of the filter to catch water from the filter.
- b. Loosen pump filter (anticlockwise) until water starts to flow. Fill the flowing water into the container you have placed in front of the filter. Always keep a piece of cloth handy to absorb any spilled water.
- c. When the water inside the machine is finished, take out the filter completely by turning it.
4. Clean any residues inside the filter as well as fibers, if any, around the pump impeller region.
5. Install the filter.
6. If the filter cap is composed of two pieces, close the filter cap by pressing on the tab. If it is one piece, seat the tabs in the lower part into their places first, and then press the upper part to close.


6 Technical specifications

| | |
|--|--------------------|
| Models (EN) | WMB 91465 |
| Maximum dry laundry capacity (kg) | 9 |
| Height (cm) | 84 |
| Width (cm) | 60 |
| Depth (cm) | 59 |
| Net weight (±4 kg.) | 78 |
| Electrical input (V/Hz) | 230 V / 50Hz |
| Total current (A) | 10 |
| Total power (W) | 2200 |
| Spin speed (rpm max.) | 1400 |
| Stand-by mode power (W) | 0.60 |
| Off-mode power (W) | 0.50 |
| Main model code | 958 |
| Single Water inlet / Double Water inlet | • / - |
|  WOOLMARK APPAREL CARE | Woolmark No: M1232 |

- Available


 Technical specifications may be changed without prior notice to improve the quality of the product.


 Figures in this manual are schematic and may not match the product exactly.


 Values stated on the product labels or in the documentation accompanying it are obtained in laboratory conditions in accordance with the relevant standards. Depending on operational and environmental conditions of the product, these values may vary.





“The Wool wash cycle of this machine has been tested and approved by **The Woolmark Company** for the washing of Woolmark garments labelled as “**machine wash**” provided that the garments are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine.



Cotton
(Cottons)



Synthetics



Duvet
(Bedding)



Shirts



BabyProtect+
(Darkcare)



Darkwash
(Darkcare)



Freshen
Up



Night mode

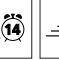

Cotton
Eco



Hand wash



Woolens



Super short
express
(Express 14)



Daily express



Curtain



Rinse

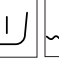

Drain



Spin



Prewash



Anti creasing



Rinse Plus



Favourite



Temperature

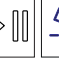
Time
Delay


Child Lock


On/Off


Start
Pause


Soiling Level
Adjustment

7 Troubleshooting

Programme cannot be started or selected.

- Washing machine has switched to self protection mode due to a supply problem (line voltage, water pressure, etc.). >>> *Press and hold Start / Pause button for 3 seconds to reset the machine to factory settings. (See "Cancelling the programme")*

Water in the machine.

- Some water might have remained in the product due to the quality control processes in the production. >>> *This is not a failure; water is not harmful to the machine.*

Machine vibrates or makes noise.

- Machine might be standing unbalanced. >>> *Adjust the feet to level the machine.*
- A hard substance might have entered into the pump filter. >>> *Clean the pump filter.*
- Transportation safety bolts are not removed. >>> *Remove the transportation safety bolts.*
- Laundry quantity in the machine might be too little. >>> *Add more laundry to the machine.*
- Machine might be overloaded with laundry. >>> *Take out some of the laundry from the machine or distribute the load by hand to balance it homogenously in the machine.*
- Machine might be leaning on a rigid item. >>> *Make sure that the machine is not leaning on anything.*

Machine stopped shortly after the programme started.

- Machine might have stopped temporarily due to low voltage. >>> *It will resume running when the voltage restores to the normal level.*

Programme time does not countdown. (On models with display)

- Timer may stop during water intake. >>> *Timer indicator will not countdown until the machine takes in adequate amount of water. The machine will wait until there is sufficient amount of water to avoid poor washing results due to lack of water. Timer indicator will resume countdown after this.*
- Timer may stop during heating step. >>> *Timer indicator will not countdown until the machine reaches the selected temperature.*
- Timer may stop during spinning step. >>> *Automatic unbalanced load detection system might be activated due to the unbalanced distribution of the laundry in the drum.*
- Machine does not switch to spinning step when the laundry is not evenly distributed in the drum to prevent any damage to the machine and to its surrounding environment. Laundry should be rearranged and re-spun.

Foam is overflowing from the detergent drawer.

- Too much detergent is used. >>> *Mix 1 tablespoonful softener and ½ l water and pour into the main wash compartment of the detergent drawer.*
- Put detergent into the machine suitable for the programmes and maximum loads indicated in the "Programme and consumption table". When you use additional chemicals (stain removers, bleaches and etc), reduce the amount of detergent.

Laundry remains wet at the end of the programme

- Excessive foam might have occurred and automatic foam absorption system might have been activated due to too much detergent usage. >>> *Use recommended amount of detergent.*
- Machine does not switch to spinning step when the laundry is not evenly distributed in the drum to prevent any damage to the machine and to its surrounding environment. Laundry should be rearranged and re-spun.



WARNING: If you cannot eliminate the problem although you follow the instructions in this section, consult your dealer or the Authorized Service Agent. Never try to repair a nonfunctional product yourself.

1 Važne upute o sigurnosti i zaštiti okoliša

Ovaj dio sadrži sigurnosne informacije koje će vam pomoći da se zaštitite od opasnosti od ozljede ili oštećenja. Neispunjavanje ovih uputa poništava sva jamstva.

1.1 Opća sigurnost

- Ovaj proizvod smiju koristiti djeca od 8 godina i starija i osobe čije tjelesne, osjetne ili mentalne sposobnosti nisu potpuno razvijene ili kojima nedostaje iskustva i znanja pod uvjetom da imaju nadzor ili su naučeni o sigurnoj uporabi proizvoda te rizicima koje on nosi. Djeca se ne smiju igrati uređajem. Čišćenje i održavanje ne smiju vršiti djeca osim ako ako imaju nečiji nadzor.
- Nikada ne stavljajte proizvod na pod pokriven sagom. U suprotnom će nedostatak protoka zraka ispod stroja uzrokovati pregrijavanje električnih dijelova. To može dovesti do problema s Vašim strojem.
- Ako je proizvod pokvaren, ne smije raditi ako ga ne popravi ovlaštenu servis. Postoji opasnost od strujnog udara!
- Ovaj proizvod je dizajniran tako da će nastaviti raditi u slučaju ponovnog napajanja nakon prekida napajanja. Ako želite prekinuti program, pogledajte dio "Opoziv programa".
- Spojite uređaj na uzemljenu utičnicu zaštićenu osiguračem od 16 A. Uzemljenje vam mora napraviti ovlaštenu električar. Naša tvrtka neće biti odgovorna za bilo kakva oštećenja do kojih dođe kad se proizvod koristi bez uzemljenja u skladu s lokalnim zakonima.
- Crijeva za dovod i izbacivanje vode moraju biti dobro pričvršćena i ostati neoštećena. Inače postoji opasnost od curenja vode.
- Nikada nemojte otvarati vrata perilice ili vaditi filter dok još ima vode u bubnju. Inače može doći do opasnosti od izlivanja i ozljede zbog tople vode.
- Nemojte na silu otvarati vrata za punjenje. Vrata za punjenje će biti spremna za otvaranje tek nekoliko minuta nakon dovršetka ciklusa za pranje. U slučaju nasilnog otvaranja vrata za punjenje, mogu se oštetiti vrata i mehanizam za zaključavanje.
- Isključite uređaj kad se ne koristi.
- Nikad nemojte prati uređaj tako da na njega nanosite ili izlivate vodu! Postoji opasnost od strujnog udara!
- Nikada nemojte dirati utikač mokrim rukama! Ne ne isključujte tako da povlačite kabel, uvijek izvlačite tako da držite samo za utikač.
- Koristite samo deterdžente, omekšivače i dodatke koji su podesni za strojno pranje.
- Slijedite upute na etiketama tkanina i pakiranjima deterdženta.
- Proizvod se mora isključivati tijekom instalacije, održavanja, čišćenja i popravaka.
- Neka instalaciju i popravke uvijek izvodi **ovlaštenu servisier**. Proizvođač neće biti odgovoran za oštećenja do kojih dođe zbog postupaka koje izvode neovlaštene osobe.
- Ako je kabel napajanja oštećen, mora ga zamijeniti proizvođač, postprodajni servis ili slično kvalificirana osoba (po mogućnosti električar) ili netko koga je uvoznik odredio da bi se izbjegli mogući rizici.

1.2 Predviđena uporaba

- Ovaj proizvod je napravljen za uporabu u kućanstvu. Nije podesno za komercijalnu uporabu i ne smije se koristiti za bilo što osim namijenjene svrhe.
- Uređaj se smije koristiti samo za pranje i ispiranje rublja prema tome kako su označene.
- Proizvođač se odriče bilo kakve odgovornosti do koje dođe zbog nepravilne uporabe ili transporta.

1.3 Sigurnost djece

- Materijali pakiranja su opasni za djecu. Držite materijale pakiranja na sigurnom mjestu, podalje od doseg djece.
- Električni proizvodi su opasni za djecu. Držite djecu podalje od uređaja kad radi. Ne dajte im da diraju perilicu. Koristite zaključavanje zbog djece da biste spriječili djecu da diraju proizvod.
- Nemojte zaboraviti zatvoriti vrata za punjenje kad izlazite iz prostorije gdje se proizvod nalazi.
- Držite sve deterdžente i dodatke na sigurnom mjestu, podalje od doseg djece zatvaranjem poklopca spremnika deterdženta ili brtvljenjem pakiranja deterdženta.

1.4 Informacije o pakiranju

- Materijali pakiranja proizvoda su proizvedeni od recikliranih materijala u skladu s našim Nacionalnim odredbama o okolišu. Ne odlažite materijale pakiranja skupa s otpadom iz kućanstva ili drugim otpadom. Odnosite ih na odlagalište za materijale pakiranja kako su odredile lokalne vlasti.

1.5 Odlaganje proizvoda

- Ovaj proizvod je preveden s kvalitetnim dijelovima i materijalima koji se mogu ponovno koristiti i podesni su za reciklažu. Stoga na kraju vijeka trajanja ne odlažite proizvod s običnim otpadom iz kućanstva. Odnosite ga na odlagalište za reciklažu električne i elektronske opreme. Molimo, konzultirajte se s lokalnim vlastima da biste saznali koje je najbliže odlagalište. Pomozite u zaštiti okoliša i prirodnih resursa recikliranjem korištenih proizvoda. Zbog sigurnosti djece, prije odlaganja proizvoda prerežite kabel napajanja i polomite mehanizam za zaključavanje vrata za punjenje tako da ne radi.

1.6 Usklađenost s WEEE



Ovaj proizvod nosi oznaku selektivnog razvrstavanja za odbačene električne i elektroničke uređaje (WEEE). To znači da se s proizvodom mora postupati prema Europskoj smjernici 2002/96/EC da bi se reciklirao ili rastavio da bi se smanjio njegov utjecaj na okoliš. Za dodatne informacije, molimo javite se vašim lokalnim ili regionalnim vlastima. Elektronski uređaji koji nisu uključeni u ovaj proces selektivnog razvrstavanja su potencijalno opasni za okoliš i ljudsko zdravlje zbog prisutnosti štetnih tvari.

2 INSTALACIJA

Za instalaciju proizvoda, potražite najbližeg ovlaštenog serviser. Prije zvanja ovlaštenog serviser, da biste spremili proizvod za uporabu, pregledajte informaciju u korisničkom priručniku i pazite da su električna energija, dovod vode i sustav za odvod vode odgovarajući. Ako nisu, pozovite ovlaštenog majstora i vodoinstalatera da izvrši sve potrebne prilagodbe.



Priprema lokacije i elektroinstalacija, instalacija vodovoda i kanalizacije na mjestu za instalaciju je odgovornost klijenta.



UPOZORENJE: Instalaciju i spajanje proizvoda na el. energiju mora izvršiti ovlašten server. Proizvođač neće biti odgovoran za oštećenja do kojih dođe zbog postupaka koje izvede neovlaštena osoba.



UPOZORENJE: Prije instalacije, vizualno provjerite da li proizvod na sebi ima bilo kakvih nedostataka. Ako nema, instalirajte ga. Oštećeni proizvodi predstavljaju rizik za vašu sigurnost.



Pazite da se crijeva za dovod i odvod vode, kao i kabel napajanja, ne presavijaju, nisu priklješteni ili zgñječeni dok se uređaj gurao na mjesto nakon instalacije ili čišćenja.

2.1 Odgovarajuća lokacija za instalaciju

- Stavite stroj na čvrstu površinu. Ne stavljajte ga na krpur ili slične površine.
- Ukupna masa perilice i sušilice - s cijelim punjenjem - kad se stave jedno na drugo doseže do cca. 180 kg. Stavite proizvod na čvrst i ravan pod koji ima dovoljan kapacitet punjenja!
- Ne stavljajte proizvod na kabel napajanja.
- Ne instalirajte proizvod na mjestu gdje temperatura može pasti ispod 0°C.
- Stavite proizvod najmanje 1 cm od rubova drugog namještaja.

2.2 Uklanjanje pojačanja pakiranja

Nagnite stroj prema nazad da biste uklonili pojačanja pakiranja. Uklonite pojačanje pakiranja povlačenjem trake.



2.3 Otvaranje transportnih brava

 
 
 


UPOZORENJE: Ne skidajte transportne brave prije vađenja pojačanja pakiranja.



UPOZORENJE: Uklonite sigurnosne matice za transport prije rada perilice! U suprotnom će se proizvod oštetiti.

1. Otpustite sve matice odgovarajućim ključem dok se ne budu slobodno okretale (C).
2. Skinite transportne sigurnosne vijke laganim okretanjem.
3. Stavite poklopce dostavljene u vrećici s Uputama za uporabu u rupe na stražnjoj ploči. (P)



Držite transportne sigurnosne vijke na sigurnom mjestu da biste ih ponovno koristili kad se perilica bude ponovno prenosila u budućnosti.



Nikad ne pomičite aparat bez montiranih sigurnosnih vijaka!

2.4 Spajanje s vodovodom



Tlak vode koji je potreban za rad proizvoda je između 1 i 10 bara (0.1 – 1 MPa). Morate imati 10 - 80 litara vode koji teče iz pipe u jednoj minuti da bi stroj radio kako treba. Stavite ventil koji smanjuje tlak ako je tlak vode viši.



Ako ćete koristiti proizvod s dvostrukim ulazom vode kao jednostruku jedinicu ulaza (**hladne**) vode, morate instalirati odgovarajući čep na ventil tople vode, prije rada s uređajem. (Odnosi se na proizvode dostavljene s grupom čepova.)




UPOZORENJE: Modeli s jednostrukim dovodom vode se ne smiju spajati na pipu s toplom vodom. U takvom će slučaju rublje biti oštećeno ili će se proizvod prebaciti na zaštitni način rada i neće raditi.




UPOZORENJE: Ne koristite stara ili rabljena crijeva za dovod vode na novom proizvodu. To može uzrokovati mrlje na vašem rublju.

1. Spojite posebna crijeva dostavljena sa strojem na ventil dovoda vode na stroju. Crveno crijevo (lijevo) (maks. 90°C) je za dovod tople vode, plavo crijevo (desno) (maks. 25°C) je za dovod hladne vode.

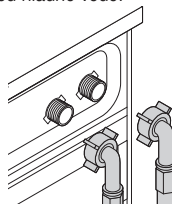

UPOZORENJE: Kad montirate perilicu, pazite da su priključci na hladnu i toplu vodu točno spojeni. Inače vaše rublje može na kraju pranja biti vruće i pohabati će se.

2. Zavijte sve vijke crijeva rukom. Kod zatezanja vijaka, nikad ne koristite ključ.

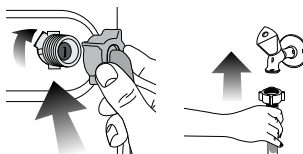

3. Otvorite pipe do kraja kad spojite crijevo da biste provjerili da li voda curi na sastavima. Ako curi, isključite pipu i uklonite vijak. Ponovno pažljivo zategnite vijak nakon provjere brtve. Da biste spriječili curenje vode i posljedična oštećenja, držite pipe zatvorene kad se stroj ne koristi.


2.5 Spajanje na odljev

- Kraj crijeva se mora spojiti direktno na odljev za vodu ili na umivaonik.



UPOZORENJE: Vaša će kuća biti poplavljena ako crijevo izađe iz kućišta tijekom izbacivanja vode. Nadalje, postoji opasnost od opekline zbog visokih temperatura pranja! Da biste spriječili takve situacije i da biste osigurali nesmetano uzimanje i izbacivanje vode u stroju, pridržite kraj crijeva za odlijevanje tako da ne izlazi.

- Crijevo se treba spojiti na visinu od najmanje 40 cm i najviše 100 cm.
- U slučaju da je crijevo dignuto nakon stajanja na podu ili blizu poda (manje od 40 cm iznad zemlje), odljev vode postaje teži i rublje može izaći mokro. Zato, pridržavajte se visina opisanih na slici.

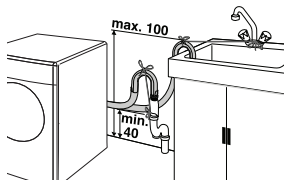


- Da biste spriječili vraćanje prljave vode u stroj i omogućili lako izbacivanje vode, ne uranjajte kraj crijeva u prljavu vodu i ne stavljajte je u odvod dulje od 15 cm. Ako je predugo, skratite ga.
- Kraj tog crijeva se ne smije presavijati, ne smije se stajati na njega i crijevo ne smije biti zaglavljeno između odvoda i stroja.
- Ako je duljina crijeva prekratka, koristite ga tako da dodate originalno produžno crijevo. Duljina crijeva ne smije prelaziti 3.2m. Da biste izbjegli istjecanje vode, spoj između produžnog crijeva i odljevnog crijeva na stroju mora biti dobro montiran odgovarajućom spojnicom da ne spadne i da ne curi.


2.6 Prilagođavanje nogu



UPOZORENJE: Da biste osigurali da proizvod radi tiše i s manje vibracija, mora stajati ravno i u ravnoteži na svojim nožicama. Uravnotežite stroj prilagođavanjem nožica. Inače se proizvod može pomaknuti s mjesta i uzrokovati lom i probleme s vibracijom.

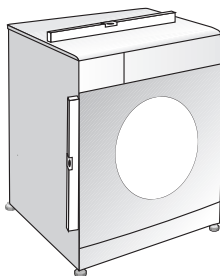

1. Ručno (rukom) otpustite vijke za zaključavanje na nogama.
2. Prilagodite nožice dok proizvod ne bude stajao ravno i u ravnoteži.
3. Ponovno zavijte sve vijke rukom.

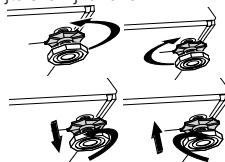

UPOZORENJE: Ne koristite nikakve alate za otpuštanje vijaka za zaključavanje. Inače se mogu oštetiti.

2.7. Elektroinstalacije

Spojite uređaj na uzemljenu utičnicu zaštićenu osiguračem od 16 A. Naša tvrtka neće biti odgovorna za bilo kakva oštećenja do kojih dođe kad se proizvod koristi bez uzemljenja u skladu s lokalnim zakonima.

- Spajanje treba biti u skladu s nacionalnim odredbama.
- Kabel napajanja mora biti lako dostupan nakon instalacije.
- Ako je trenutna vrijednost osigurača ili sklopke u kući manja od 16 Ampera, neka ovlašteni električar instalira osigurač od 16 Ampera.
- Naponi navedeni u "Tehničkim specifikacijama" moraju biti jednaki naponu vaše mreže.
- Ne spajajte preko produžnih kabela ili razvodnika.



UPOZORENJE: Oštećene kabele napajanja moraju zamijeniti ovlašteni serviseri.

Transport proizvoda

1. Isključite proizvod prije transporta.
2. Uklonite spojeve za izbacivanje vode i dovod vode,
3. Izbacite svu vodu koja je ostala u proizvodu. Pogledajte 5.5.
4. Instalirajte sigurnosne matice obrnutim redoslijedom prema postupku uklanjanja; pogledajte 2.3.



Nikad ne pomičite aparat bez montiranih sigurnosnih vijaka!



UPOZORENJE: Materijali pakiranja su opasni za djecu. Držite materijale pakiranja na sigurnom mjestu, podalje od doseg djece.

3 Priprema

3.1 Sortiranje rublja

- Sortirajte rublje prema vrsti tkanine, boji i tome koliko je prljavo te dopuštenoj temperaturi vode.
- Uvijek se pridržavajte uputa navedenih na etiketama odjevnih predmeta.

3.2 Priprema rublja za pranje

- Rublje s metalnim dodacima kao što su grudnjaci, kopče remena i metalni gumbi mogu oštetiti stroj. Uklonite metalne dijelove ili perite rublje tako da ga stavite u vreću za pranje ili jastučnicu.
- Izvadite sve stvari iz džepova, kao što su novčići, olovke i spajalice, preokrenite džepove i očistite. Takvi predmeti mogu oštetiti proizvod ili uzrokovati buku.
- Stavite male predmete, kao što su čarapice za bebe i najlonske čarape u vreću za pranje rublja ili jastučnicu.
- Stavite zavjese tako da ih ne sabijate. Uklonite vješalice za zavjese.
- Zakopčajte patent zatvaračem zašijte labave gumbе i zakrpajte poderane i pohabane dijelove.
- Perite proizvod označene s "perivo u perilici" ili "perivo na ruke" samo na odgovarajućem programu.
- Ne perite bijelo i obojano rublje skupa. Novo tamno pamučno rublje može ispustiti puno boje. Perite ih posebno.
- Postojane mrlje se moraju pravilno tretirati prije pranja. Ako niste sigurni, provjerite u kemijskoj čistionici.
- Koristite samo one boje/sredstva za promjenu boje i sredstva protiv kamenca za strojno pranje. Uvijek se držite uputa na pakiranju.
- Perite hlače i osjetljivo rublje okrenuto naopako.
- Držite rublje od angorske vune u hladnjaku nekoliko sati prije pranja. To će smanjiti nakupine.
- Rublje koje je bilo izloženo materijalima kao što su brašno, kamenac, prašina, mlijeko u prahu itd se moraju dobro istresti prije stavljanja u stroj. Takav prah na rublju može se može nakupiti na unutarnjim dijelovima stroja i može uzrokovati oštećenje.

3.3 Što treba raditi za uštedu energije


Sljedeće informacije će Vam pomoći da koristite proizvod na ekološki i energetski učinkovit način.

- Neka proizvod radi na najvišem dopuštenom kapacitetu koji je dopušten za odabrani program, ali nemojte preopteretiti; pogledajte "Tablicu programa i potrošnje".
- Uvijek slijedite upute o deterdžentu na pakiranju deterdženta.
- Perite malo prljavo rublje na niskim temperaturama.
- Koristite brže programe za manje količine malo prljavog rublja.
- Ne koristite pretpranje i visoke temperature za rublje koje nije jako prljavo ili koje ne sadrži mrlje.
- Ako planirate sušiti svoje rublje u sušilici, odaberite najveću preporučenu brzinu centrifuge tijekom postupka pranja.
- Ne koristite više deterdženta od preporučene količine deterdženta na pakiranju.

3.4 Prva uporaba

Prije početka uporabe proizvoda, pazite da su sve pripreme izvršene u skladu s uputama u dijelu "Važne sigurnosne informacije" i "Instalacija".

Da biste pripremili proizvod za pranje rublja, prvo izvršite program za čišćenje bubnja. Ako proizvod nije opremljen programom za čišćenje bubnja, izvršite postupak za prvu uporabu u skladu s metodama opisanim pod "5.2. Čišćenje vrata za punjenje i bubnja" u korisničkom priručniku.

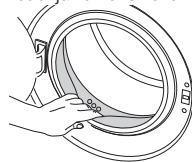

Koristite sredstvo protiv kamenca koje je podesno za perilice.



Možda je u uređaju ostalo malo vode zbog kontrole kvalitete u proizvodnji. To nije štetno po proizvod.

3.5 Odgovarajući kapacitet punjenja

Maksimalni kapacitet punjenja ovisi o vrsti rublja, stupnju prljavosti i programu pranja koji želite koristiti. stroj automatski prilagođava količinu vode prema masi stavljenog rublja.



UPOZORENJE: Pratite informacije u "Tablici programa i potrošnje". Kad je prepunjena, performanse pranja stroja će pasti. Štoviše, može doći do problema s bukom i vibracijom.

| Vrsta rublja | Masa (g) |
|---------------------|----------|
| Kućni ogrtač | 1200 |
| Maramica | 100 |
| Pokrivač za poplun | 700 |
| Plahta | 500 |
| Jastučnica | 200 |
| Stolnjak | 250 |
| Ručnik | 200 |
| Ručnik za ruke | 100 |
| Večernje odijelo | 200 |
| Donje rublje | 100 |
| Muško radno odijelo | 600 |
| Muška košulja | 200 |
| Muška pidžama | 500 |
| Bluze | 100 |

3.6 Stavljanje rublja

1. Otvorite vrata za punjenje.
2. Stavite rublje u stroj bez guranja.
3. Zatvarajte vrata za punjenje dok ne čujete zvuk zaključavanja. Pazite da u vratima nema zahvaćenih predmeta.



Vrata za punjenje su zaključana dok program radi. Vrata se mogu otvoriti tek kad program dođe do kraja.



UPOZORENJE: U slučaju pogrešnog stavljanja rublja, u stroju može doći do buke i vibracija.

3.7 Uporaba deterdženta i omekšivača




Kod uporabe deterdženta, omekšivača, štirke, boje za tekstili, bjelila ili sredstva za uklanjanje kamenca, pažljivo pročitajte upute proizvođača na pakiranju i slijedite preporučene vrijednosti za doziranje. Ukoliko je dostupna, koristite čašicu za mjerenje.

Ladica za deterdžent

Ladica deterdženta se sastoji od 3 pretinca:

- (1) za pretpiranje
- (2) za glavno pranje
- (3) za omekšivač
- (*) osim toga, tu je dio sa sionom u odjeljku za omekšivač.

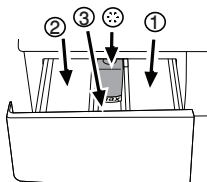

Deterdžent, omekšivač i druga sredstva za pranje

- Dodajte deterdžent i omekšivač prije pokretanja programa za pranje.
- Nikada ne otvarajte ladicu deterdženta dok program pranja radi!
- Kad koristite program bez pretpiranja, ne stavljajte nikakav deterdžent u dio za pretpiranje (odjeljak br. "1").
- Kad koristite program bez pretpiranja, ne stavljajte nikakav tekući deterdžent u dio za pretpiranje (odjeljak br. "1").
- Nemojte birati program s pretpiranjem ako koristite vrećicu s deterdžentom ili loptu za raspršivanje. Stavite vrećicu s deterdžentom ili loptu za raspršivanje direktno u stroj, s rubljem.
- ako koristite tekući deterdžent, nemojte zaboraviti staviti čašicu za deterdžent u odjeljak za pretpiranje (odjeljak br. "2").

Odabir tipa deterdženta

Tip deterdženta koji ćete koristiti ovisi o tipu i boji tkanine.

- Koristite različite deterdžente za obojano i bijelo rublje.
- Perite svoju osjetljivu odjeću posebnim deterdžentima (tekući deterdžent, šampon za vunu itd) koji se koristi samo za osjetljivu odjeću.
- Kad perete tamnije rublje i prekrivačem preporučuje se uporaba tekućeg deterdženta.
- Perite vunu posebnim deterdžentom koji se proizvodi samo za vunu.



UPOZORENJE: Koristite samo deterdžente proizvedene specifično za perilice.



UPOZORENJE: Ne koristite sapun u prahu.

Prilagođavanje količine deterdženta

Količina deterdženta koja se će se koristiti ovisi o količini rublja, o tome koliko je ono prljavo, te tvrdoći vode.

- Nemojte koristiti količine koje prelaze količine preporučene na pakiranju da biste izbjegli problem s previše pjene, lošim ispiranjem, financijskom uštedom i na kraju, zaštitom okoliša.
- Koristite manje deterdženta za male količine ili malo prljavu odjeću.

Uporaba omekšivača


Stavite omekšivač u odjeljak omekšivača ladice za deterdžent.

- Nemojte prelaziti oznaku razine (>max<) u odjeljku omekšivača.
- Ako je omekšivač izgubio tečnost, razblažite ga vodom prije nego ga stavite u ladicu za deterdžent.

Uporaba tekućih deterdženata

Ako proizvod sadrži čašicu za tekući deterdžent:

- Pazite da ste stavili šalicu za tekući deterdžent u odjeljak br. "2".
- Ako je tekući deterdžent izgubio tečnost, razblažite ga vodom prije nego ga stavite u ladicu za deterdžent.

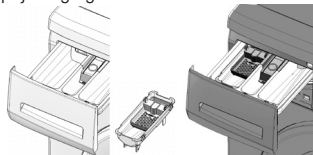

Ako proizvod ne sadrži čašicu za tekući deterdžent:

- Ne koristite tekući deterdžent za pretpiranje kod programa s pretpiranjem.
- Tekući deterdžent ostavlja mrlje na vašoj odjeći kad koristite funkciju odgođenog početka. Ako budete koristili funkciju odgođenog početka, ne koristite tekući deterdžent.

Uporaba gela i deterdženta u tabletama

Primijenite sljedeće upute kad koristite tabletu, gel i slične deterdžente.

- Ako je gustoća deterdženta u gelu tekuća a vaš stroj ne sadrži posebnu čašicu za tekući deterdžent, stavite deterdžent u gelu u glavni odjeljak deterdženta za pranje tijekom prvog uzimanja vode. Ako vaš stroj sadrži čašicu za tekući deterdžent, napunite deterdžent u ovu čašicu prije pokretanja programa.
- Ako gustoća deterdženta u gelu nije tekuća ili u obliku tekuće tablete, stavite direktno u bubanj prije pranja.
- Stavite deterdžente u tabletama u glavni pretinac za pranje (pretinac br. "2") ili izravno u bubanj prije pranja.



Deterdženti u tabletama mogu ostavljati ostatke u odjeljcima za deterdžent. Ako vam se to dogodi, ubuduće stavite tabletu deterdženta između rublja, bliže donjem dijelu bubnja.



Koristite deterdžent u obliku tablete ili gela bez odabira funkcije pretpiranja.

Uporaba štirke

- Dodajte tekuću štirku, štirku u prahu ili boju za tkaninu u pretinac za omekšivač.
- Ne koristite omekšivač i štirku skupa u ciklusu pranja.
- Nakon uporabe štirke, obrišite unutrašnjost stroja mokrom i čistom krpom.

Uporaba bjelila

- Odaberite program s pretpranjem i dodajte bjelilo na kraju pretpranja. Ne stavljajte deterdžent u odjeljak za pretpranje. Kao alternativnu primjenu, odaberite program s dodatnim ispiranjem i dodajte bjelilo dok stroj uzima vodu iz odjeljka deterdženta tijekom prvog ispiranja.
- Ne koristite bjelilo i deterdžent tako da ih pomiješate.
- Koristite samo malu količinu (cca 50 ml) bjelila i dobro isperite odjeću, jer ono uzrokuje iritaciju kože. Ne prelijevajte bjelilo na odjeću i ne koristite ga za obojanu odjeću.

- Kad koristite bjelila zasnovana na kisiku, odaberite program koji pere na nižoj temperaturi.
- Bjelila zasnovana na kisiku se mogu koristiti skupa s deterdžentima; međutim, ako gustoća nije ista kao deterdžent, stavite prvo deterdžent u odjeljak br. "2" u ladicu za deterdžent i čekajte dok deterdžent ne poteče kad stroj uzima vodu. Dodajte bjelilo iz istog odjeljka dok stroj još uzima vodu.

Uporaba sredstva za uklanjanje kamenca


- Po potrebi, koristite sredstva za uklanjanje kamenca napravljena specifično samo za perilice.

3.8. Savjeti za učinkovito pranje

| | | Odjeća | | | |
|-------------------|--|--|--|---|---|
| | | Svijetle boje i bijelo | Boje | Tamne boje | Osjetljivo/vuna/svila |
| | | (Preporučen raspon temperature na osnovi razine prijavosti: 40-90°C) | (Preporučen raspon temperature na osnovi razine prijavosti: hladno-40°C) | (Preporučen raspon temperature na osnovi razine prijavosti: hladno-40°C) | (Preporučen raspon temperature na osnovi razine prijavosti: hladno-30°C) |
| Razina prijavosti | Jako prijava (otporne mrlje kao što su mrlje od trave, kave, voća i kruha). | Možda će biti potrebno prethodno tretirati mrlje za obavljanje pretpranja. Za jako prijavu odjeću mogu se koristiti preporučene doze deterdženta u prašku i tekućeg deterdženta preporučene za bijelo rublje. Preporučuje se koristiti deterdžente u prahu za čišćenje mrlja od gline i zemlje, kao i mrlja koje su osjetljive na bjelila. | Za jako prljavu odjeću mogu se koristiti preporučene doze deterdženta u prašku i tekućeg deterdženta preporučene za jako prljavu odjeću. Preporučuje se koristiti deterdžente u prahu za čišćenje mrlja od gline i zemlje, kao i mrlja koje su osjetljive na bjelila. Koristite deterdžente bez bjelila. | Za jako prijavu odjeću mogu se koristiti preporučene doze deterdženta u prašku i tekućeg deterdženta koji odgovaraju za odjeću u boji i odjeću tamnih boja. | Za osjetljivu odjeću trebate koristiti tekuće deterdžente. Odjeća od vune i svile se mora prati posebnim deterdžentima za vunu. |
| | Normalno prijava (Na primjer, mrlje na okovratnicama i manžetama) | Za normalno prijavu odjeću mogu se koristiti preporučene doze deterdženta u prašku i tekućeg deterdženta za bijelo rublje. | Za normalno prijavu odjeću mogu se koristiti preporučene doze deterdženta u prašku i tekućeg deterdženta za rublje u boji. Koristite deterdžente bez bjelila. | Za normalno prijavu odjeću mogu se koristiti preporučene doze deterdženta u prašku i tekućeg deterdženta koji odgovaraju za odjeću u boji i odjeću tamnih boja. | Za osjetljivu odjeću trebate koristiti tekuće deterdžente. Odjeća od vune i svile se mora prati posebnim deterdžentima za vunu. |
| | Malo prijava (Nema vidljivih mrlja). | Za malo prijavu odjeću mogu se koristiti preporučene doze deterdženta u prašku i tekućeg deterdženta preporučene za bijelo rublje. | Za malo prijavu odjeću mogu se koristiti preporučene doze deterdženta u prašku i tekućeg deterdženta preporučene za jako prijavu odjeću. Koristite deterdžente bez bjelila. | Za malo prijavu odjeću mogu se koristiti preporučene doze deterdženta u prašku i tekućeg deterdženta koji odgovaraju za odjeću u boji i odjeću tamnih boja. | Za osjetljivu odjeću trebate koristiti tekuće deterdžente. Odjeća od vune i svile se mora prati posebnim deterdžentima za vunu. |

4 Rad s proizvodom


4.1 Upravljačka ploča

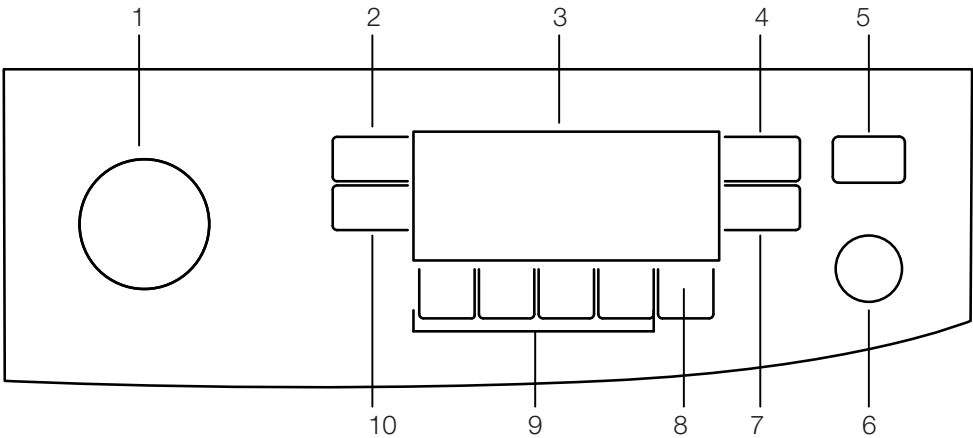

- 1 - Tipka za odabir programa
- 2 - Tipka za prilagođavanje temperature
- 3 - Zaslon
- 4 - Tipka za podešavanje razine prljavosti
- 5 - Tipka start/pauza

- 6 - Tipka za uključivanje / isključivanje
- 7 - Tipka za podešavanje vremena završetka
- 8 - Tipka za najdraže programe
- 9 - Tipke pomoćnih funkcija
- 10 - Tipka za postavljanje brzine centrifuge

4.2. Simboli prikaza

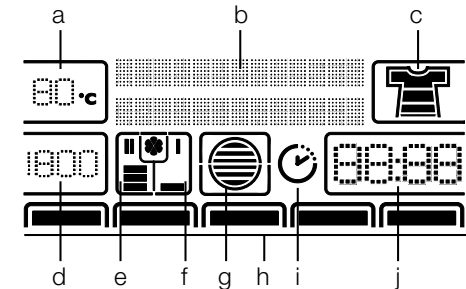

- a - Oznaka temperature
- b - informacijski redak
- c - Oznaka razine prljavosti
- d - Oznaka brzine centrifuge
- e - Oznaka pretinca za deterdžent za glavno pranje
- f - Oznaka pretinca za deterdžent za pretpiranje
- g - Oznaka punjenja (prikazuje preporučenu količinu punjenja)
- h - Oznaka pomoćne funkcije
- i - Oznaka vremena kraja
- j - Oznaka vremena

4.3 Priprema stroja

- 1. Pazite da su crijeva čvrsto spojena.
- 2. Uključite stroj u struju.
- 3. Otvorite pipu do kraja.
- 4. Stavite rublje u stroj.
- 5. Dodajte deterdžent i omekšivač.

4.4. Odabir programa

- 1. Odaberite program koji odgovara za vrstu, količinu i prljavost rublja u skladu s "Tablicom programa i potrošnje" i tablicom temperature dolje.

| | |
|------------------|---|
| 90°C | Jako prljavo, bijeli pamuk i lan. (Prekrivači za stolice, stolnjaci, ručnici, posteljina, itd.); |
| 60°C | Normalno prljavo, obojano, pamuk otporan na izbjeljivanje ili sintetička odjeća (košulja, spavaćica, pidžama, itd) i lagano prljavi bijeli lan (donje rublje, itd). |
| 40°C-30°C-hladno | Miješano rublje uključujući osjetljive tkanine (zastori, zavjese, itd), sintetika i vuna. |

- 2. Odaberite željeni program tipkom za izbor programa.

| | |
|--|--|
| | Programi su ograničeni najvećom brzinom centrifuge koja odgovara određenoj vrsti tkanine. |
| | Kod odabira programa, uvijek imajte na umu vrstu tkanine, boju, stupanj prljavosti i dopuštenu temperaturu vode. |



Uvijek birajte najnižu potrebnu temperaturu. Viša temperatura znači višu potrošnju energije.



Za dodatne informacije o programu, pogledajte „Tablicu programa i potrošnje“

4.5 Glavni programi

Ovisno o vrsti tkanine, koristite sljedeće glavne programe.

• Pamuk

Koristite ovaj program za rublje od pamuka (kao što su plahte, pokrivaci za poplun i jastučnice, ručnici, kućni ogrtač, donje rublje, itd.). Vaše rublje će biti oprano jakim pokretima pranja tijekom duljeg ciklusa pranja.

• Sintetika

Koristite ovaj program za pranje vaše sintetičke odjeće (košulje, bluze, mješavina sintetičke/pamuka, itd). Pere s nježnim djelovanjem i ima kraći ciklus pranja u usporedbi s programom Pamuk.

Za zastore i til, koristite program Sintetika 40°C s pretpranjem i odabranom funkcijom protiv gužvanja. Kako njihova mrežasta tkanina uzrokuje jaku pjenu, perite zastore/til tako da stavite malu količinu deterdženta u glavni odjeljak za pranje. Ne stavljajte deterdžent u odjeljak za pretpranje.

• Vuna

Koristite ovaj program za pranje vunene odjeće. Odaberite odgovarajuću temperaturu koja je u skladu s etiketama na vašoj odjeći. Za vunu koristite odgovarajući deterdžent.



Program za vunu na ovom stroju je odobrila "Tvrta Woolmark" za pranje Woolmark proizvoda perivih u perilici, pod uvjetom da se proizvodi peru u skladu s uputama na etiketi proizvoda i uputama koje je objavio proizvođač ovog stroja.

• Automatski program

Koristite ovaj program za pranje često pranog pamuka, sintetike ili miješane odjeće. Program otkriva vrstu i količinu rublja za automatsko prilagođavanje potrošnje vode, vrijeme programa i brzine centrifuge.



UPOZORENJE: Nemojte prati vunu i osjetljivu odjeću na ovom programu. Ako temperatura očitana na prikazu temperature nije u skladu s uputama za pranje odjavnog predmeta, odaberite temperaturu u skladu s uputama za pranje za odjevni predmet.

Maksimalna temperatura za pranje u automatskom programu ovisi o razini prljivosti i vrsti rublja i iznosi 60°C. Učinak pranja možda neće biti na željenoj razini za jako prljavo bijelo rublje i otporne mrlje (kragna, čarape, mrlja od znoj, itd.) U tom slučaju se preporučuje da odaberete program za pamuk s pretpranjem i postavite temperaturu na 50-60°C.

Puno odjeće se pravilno otkriva i sigurno pere na automatskom programu.

Odgovarajuća odjeća i odgovarajuće postavke automatskog programa za pranje su prikazani u tablici dolje.

| Vrsta rublja | Sadržaj rublja | Razine temperature koje se mogu odabrati | Maksimalna količina rublja |
|--|---|--|----------------------------|
| Kućni tekstil (poplun, plahta, jastučnica, prekrivač, ručnik, kućni ogrtač, stolnjak, krpa za ruke, salveta, prekrivač za kauč, ručnik za plažu, itd.) | Pamuk, likra | Hladno - 60 | Puni kapacitet |
| Donje rublje (potkošulje, gaćice, bokserice, itd), čarape, pidžama | Pamuk, likra | Hladno - 60 | Puni kapacitet |
| Košulje | Pamuk, poliester, lan | Hladno - 60 | 1/2 kapaciteta |
| Pletena odjeća* (majica, body, haljina, čipkasto donje rublje, tajice) | Pamuk, poliamid (najlon), poliester, likra | Hladno - 40 | 1/2 kapaciteta |
| Sportska odjeća (majica, trenirka, kratke hlače, itd). | Pamuk, poliamid (najlon), poliester, mikrovlakna, likra | Hladno - 40 | 1/2 kapaciteta |
| Traper (hlače, jakne, veste, itd.) | Pamuk, likra | Hladno - 40 | 1/2 kapaciteta |
| Odjeća od baršuna i platna (hlače, košulja itd.) | Pamuk, likra | Hladno - 40 | 1/2 kapaciteta |
| Odjeća tamnih boja | Pamuk, poliester, poliamid (najlon) | Hladno - 40 | 1/2 kapaciteta |

* Pletena odjeća se može lako suziti ili raširiti, izgubiti oblik ili teksturu zbog svojih elastičnih vlakana. Deformacije na pletenim tkaninama su povezane s kvalitetom odjeće i ne nastaju zbog programa pranja (automatski ili drugi programi pranja). Za pletenu odjeću, koristite program pranja za sportsku odjeću.

Slijedeće tablice sadrže vrste odjeće koja se treba prati nježno i neke od programa pranja koji su podesni za neku posebnu odjeću.

| Posebna vrsta rublja | Sadržaj rublja | Preporučeni program pranja |
|--|---|--|
| Bluza, haljina, suknja, marama | Viskoza, modal, rajon, tencel, liocel, angora | Ručno pranje |
| Pletivo, haljina | Vuna, akril | Vuna |
| Pulover, džemper, vesta, šal, bereta, čarape, itd. | Vuna, akril, kašmir | Vuna |
| Bluza, haljina, šal, marama | Svila, kašmir | Donje rublje |
| Satensko donje rublje, čipkasto donje rublje, odjeća od čipke, grudnjaci | Svila, poliester, poliamid | Donje rublje |
| Hlače od tkanine, suknja, haljina | Poliester | Ručno pranje |
| Posebna sportska odjeća (voodootporna i vjetrootporna odjeća) | Poliester, poliamid | Sportska odjeća |
| Zavjese od tila | Poliester, poliamid | Zavjesa |
| Poplun od vlakana | Vlakna | Posteljina |
| Jako prljava odjeća (pregače, dječja odjeća) | Pamuk, poliester | Higijena + pretpiranje (s odabirom visoke temperature) |
| Haljine za bebe | Pamuk | Higijena |

4.6 Dodatni programi

Za posebne slučajeve, na stroju su dostupni dodatni programi.

• Pamuk Eko

Koristite ovaj program za pranje normalno prijavog izdržljivog pamučnog i lanenog rublja. Iako pere dulje od drugih programa, daje uštedu energije i vode. Stvaran temperatura vode može biti drugačija od navedene temperature pranja.

Kad napunite stroj s manje rublja (npr. ½ kapaciteta ili manje), vrijeme programa se može automatski skratiti na kasnijim stadijima. U tom će se slučaju potrošnja energije i vode smanjiti zbog ekonomičnijeg pranja. Ovaj program je dostupan kod modela s oznakom preostalog vremena.

• Zaštita beba+

Koristite ovaj program za rublje za koje je potrebno anti-alergijsko i higijensko pranje na visokim temperaturama s intenzivnim i dugotrajnim ciklusima pranja.

- Program Zaštita beba+ 60°C je testirala i odobrila **Britanska zaklada za alergije** (Allergy UK) u Velikoj Britaniji.

• Ručno pranje

Na ovom program možete prati Vašu vunenu/osjetljivu odjeću koja ima etiketu "ne pere se u perilici" za koje se preporuča ručno pranje. Pere rublje s vrlo nježnim djelovanjem da se odjeća ne bi oštetila.

• Svakodnevno ekspresno

Koristite ovaj program za pranje malo prijavog pamučnog rublja za kratko vrijeme.

• Super kratko ekspresno

Koristite ovaj program za pranje male količine malo prijavog pamučnog rublja za kratko vrijeme.

• Pranje tamnog

Koristite ovaj program za pranje rublja tamnije boje ili obojanog rublja za kojeg ne želite da izbljedi. Pranje se obavlja s malo mehaničkog djelovanja i na nižim temperaturama. Za rublje tamnije boje, preporučuje uporaba tekućeg deterdženta ili šampona za vunu.

• Košulje

Ovaj program možete koristiti za pranje košulja od pamuka, sintetike i sintetičkih mješavina.

• Zavjese


Koristite ovaj program za pranje tila i zavjesa. Zahvaljujući posebnom profilu vrtnje na ovom programu, gužvanje tila i zavjesa je manje. Kako njihova mrežasta tkanina uzrokuje jaku pjenu, perite zastore/til tako da stavite malu količinu deterdženta u glavni odjeljak za pranje. Ne stavljajte deterdžent u odjeljak za pretpiranje.



Predlažemo da na ovom programu koristite posebne deterdžente za zavjese.

• Prekrivač (Poplun) (Posteljina)

Koristite ovaj program za pranje popluna od vlakana koji nose oznaku "perivo u perilici". Pazite da ste pravilno stavili poplun da ne oštetite stroj i poplun. Skinite prekrivač popluna prije stavljanje popluna u stroj. Presavijte poplun na dva dijela i stavite ga u stroj. Stavite poplun u stroj pazeći da ga stavite tako da neće doći u dodir s podom.

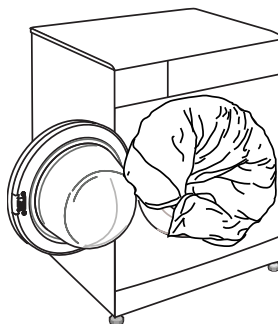

Ne stavljajte više od 1 duplog popluna od vlakana (200 x 200 cm).



Ne perite u stroju poplune, jastuke itd koji sadrže pamuk.



UPOZORENJE: Ne perite u perilici druge predmete osim popluna, kao što su tepisi, krpice itd. U stroju može doći do trajne štete.

• Osvježavanje

Koristite ovaj program za uklanjanje mirisa na rublju koje se pere samo jednom i koje nema mrlje i nije zaprljano. Također možete koristiti ovaj program za navlaživanje zgugzanih košulja i poravnanje nabora.

4.7 Posebni programi

Za posebne primjene, možete odabrati bilo kojeg od sljedećih programa:

• Ispiranje

Ovaj program se koristi kad hoćete posebno ispiranje ili dodavanje štirke.


• Centrifuga + Pumpa

koristite ovaj program za izbacivanje vode iz stroja.

4.8 Odabir temperature

Kad god izaberete novi program, temperatura predviđena za taj program će se pojaviti na indikatoru temperature. Moguće je da preporučena vrijednost temperature nije maksimalna temperatura koja se može odabrati za trenutni program.

Ovisno o odabranoj temperaturi, na zaslonu se prikazuje "Malo učinkovito", "Učinkovito" ili "Jako učinkovito".

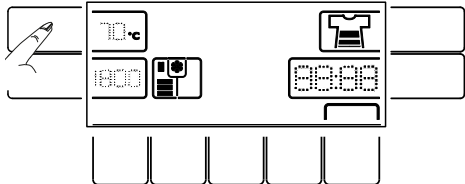


Pritisnite ponovno tipku za **podešavanje temperature** da biste smanjili temperaturu. Temperatura će se smanjiti u koracima od 10°C.



Tipka za podešavanje temperature služi samo za smanjenje temperature.

Na kraju, ma zaslonu se prikazuje "-" znak koji označava opciju pranja u hladnoj vodi. Na zaslonu se pojavljuje "hladno pranje".

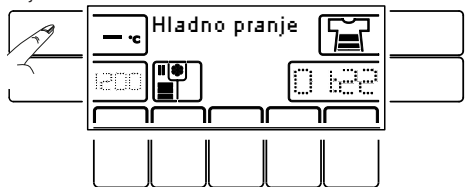

Okrvir indikatora temperature je isključen u programima koji ne dopuštaju prilagodbu temperature. Kad pritisnete tipku za prilagodbu temperature, na zaslonu se pojavljuje "Nepodesivo".



Također možete promijeniti temperaturu nakon početka pranja. Ako je okvir indikatora temperature osvijetljen nakon početka ciklusa pranja, možete odabrati željenu temperaturu. Ako je ciklus pranja dosegao točku gdje ne možete promijeniti temperaturu, okvir indikatora temperature se isključuje.




Ako listate do opcije za pranje hladnom vodom i pritisnete ponovno tipku za podešavanje temperature, na zaslonu će se pojaviti preporučena temperatura za taj program. Pritisnite ponovno tipku za podešavanje temperature da biste smanjili temperaturu.

4.9 Odabir brzine temperature

Kad god se izabere novi program, preporučena brzina centrifuge odbranog programa je prikazana na indikatoru brzine centrifuge.



Moguće je da preporučena vrijednost brzine centrifuge nije maksimalna brzina centrifuge koja se može odabrati za trenutni program.

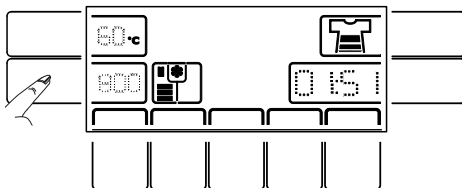

Pritisnite ponovno tipku za **podešavanje brzine centrifuge** da biste smanjili temperaturu. Brzina centrifuge se postupno smanjuje.

Zatim, ovisno o modelu proizvoda, na zaslonu se prikazuju opcije "Zadržavanje ispiranja" i "Bez ispiranja".




Tipka za podešavanje brzine centrifuge služi samo za smanjivanje brzine centrifuge.



Opcija za zadržavanje ispiranja je označena znakom "I" i opcija Bez centrifuge je označena znakom "-".


Ako ne želite izvaditi Vašu odjeću odmah nakon dovršetka programa, možete koristiti funkciju **zadržavanje ispiranja** i da biste spriječili gužvanje Vaše odjeće kad je stroj bez vode. Ova funkcija drži rublje u zadnjoj vodi za ispiranje.

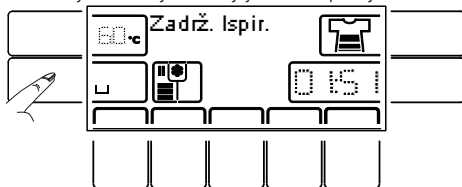

Ako želite staviti svoje rublje na centrifugu nakon funkcije za zadržavanje ispiranja:

- Podesite **Brzinu centrifuge**.

Pritisnite tipku za **početak/pauzu/opoziv**. Program se nastavlja. Stroj ispušta vodu i rublje se stavlja na centrifugu. Ako želite izbaciti vodu na kraju programa bez centrifuge, koristite funkciju **Bez centrifuge**.

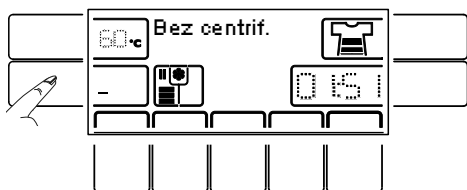

Okvir indikatora brzine centrifuge je isključen na programima koji ne omogućavaju podešavanje brzine centrifuge. Kad pritisnete tipku za **prilagodbu brzine centrifuge**, na zaslonu se pojavljuje "Nepodesivo".

Također možete promijeniti brzinu centrifuge nakon početka pranja. Ako je okvir indikatora brzine centrifuge osvijetljen nakon početka ciklusa pranja, možete odabrati željenu brzinu centrifuge. Ako je ciklus pranja dosegao točku gdje ne možete promijeniti brzinu centrifuge, okvir indikatora brzine centrifuge se isključuje.

4.10 Odabir razine prljavosti


Kad god izaberete novi program, brzina centrifuge predviđena za taj program će se pojaviti na indikatoru brzine centrifuge. Za promjenu razine prljavosti, pritisnite tipku

Podešavanje razine prljavosti.



Tipka za podešavanje razine prljavosti služi samo za smanjivanje razine prljavosti.

Jedna crta znači "malo prljavo", dvije crte "umjereno prljavo" a tri crte "jako prljavo".

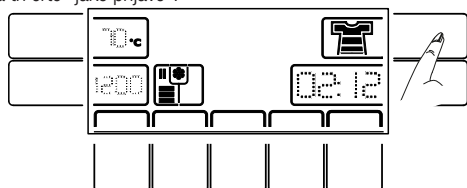




Ako korisnik pokuša odabrati razinu prljavosti koja nije podesna za odabrani program, na zaslonu se prikazuje "Nepodesivo".

4.11 Tablica programa i potrošnje


| HR | | | | | | Pomoćna funkcija | | | | Raspon temperature koji se može odabrati u °C |
|---------------------------------|------|------------------------|--------------------|--------------------------|--------------|------------------|-----------|-------------------|-----------------|---|
| Program (°C) | | Maks. opterećenje (kg) | Potrošnja vode (l) | Potrošnja energije (kWh) | Maks. Brzina | Prepranje | Noćni rad | Dodatno ispiranje | Protiv gužvanja | |
| Automatski program | 40 | 9 | **** | **** | 1600 | • | • | • | • | Hladno-60 |
| Pamuk Eko | 60** | 9 | 54 | 0.85 | 1600 | | | | | Hladno-60 |
| Pamuk Eko | 60** | 4.5 | 44 | 0.70 | 1600 | | | | | Hladno-60 |
| Pamuk Eko | 40** | 4.5 | 44 | 0.68 | 1600 | | | | | Hladno-60 |
| Pamuk | 90 | 9 | 70 | 2.20 | 1600 | • | • | • | • | Hladno-90 |
| Pamuk | 60 | 9 | 70 | 1.50 | 1600 | • | • | • | • | Hladno-90 |
| Pamuk | 40 | 9 | 70 | 1.00 | 1600 | • | • | • | • | Hladno-90 |
| Sintetika | 60 | 4 | 65 | 1.13 | 1000 | • | • | • | • | Hladno-60 |
| Sintetika | 40 | 4 | 65 | 0.90 | 1000 | • | • | • | • | Hladno-60 |
| Košulje | 60 | 4 | 85 | 1.29 | 800 | • | | • | * | Hladno-60 |
| Vuna | 40 | 2 | 45 | 0.35 | 1000 | | • | • | | Hladno-40 |
| Ručno pranje | 30 | 1.5 | 40 | 0.22 | 1000 | | | • | | Hladno-30 |
| Super kratko ekspresno | 30 | 2 | 34 | 0.81 | 1400 | | • | • | | Hladno-30 |
| Svakodnevno ekspresno | 90 | 9 | 62 | 2.04 | 1400 | | • | • | | Hladno-90 |
| Svakodnevno ekspresno | 60 | 9 | 64 | 1.06 | 1400 | | • | • | | Hladno-90 |
| Svakodnevno ekspresno | 30 | 9 | 58 | 0.17 | 1400 | | • | • | | Hladno-90 |
| Zaštita beba+ | 90 | 8 | 100 | 2.50 | 1600 | | | * | | 30 - 90 |
| Prekrivač (Poplun) (Posteljina) | 40 | - | 67 | 0.82 | 1000 | | • | • | | Hladno-60 |
| Osvježavanje | - | 1 | 1 | 0.17 | - | | | | | - |
| Pranje tamnog | 40 | 4 | 80 | 0.90 | 1000 | • | • | * | • | Hladno-40 |
| Zavjese | 30 | 2 | 68 | 0.48 | 800 | * | | * | * | Hladno-40 |

- : Može se odabrati.
- * : Automatski se bira, ne može se opozvati.
- ** : Program oznake energije (EN 60456 Ed. 3)
- ** *Pamuk eko 40°C i Pamuk eko 60°C su standardni programi." Ti se programi nazivaju 'standardni program za pamuk 40°C' i 'standardni program za pamuk 60°C'
- ***: Ako je maksimalna brzina centrifuge niža od ove vrijednosti, možete odabrati samo dostupnu maksimalnu brzinu centrifuge.
- ****: Program otkriva vrstu i količinu rublja za automatsko prilagođavanje potrošnje vode i energije i vrijeme programa.
- : Za maksimalno punjenje, pogledajte opis programa.

| | |
|--|--|
|  | Pomoćne funkcije u tablici se mogu razlikovati prema modelu Vaše perilice. |
|  | Potrošnja vode i struje o trajanje programa se može razlikovati od onih prikazanih u tablici, ovisno o promjenama u tlaku vode, tvrdoći vode i temperaturi, temperature okoline, vrsti i količini rublja, izboru dodatnih funkcija i promjenama u naponu struje. |
|  | Možete vidjeti vrijeme pranja programa kojeg ste odabrali na zaslonu stroja. Normalno je da može doći do malih razlika između vremena prikazanog na zaslonu i stvarnog vremena pranja. |

4.12 Izbor dodatnih funkcija

Odaberite potrebne dodatne funkcije prije pokretanja programa. Kad god se odabere program, okviri znaka pomoćne funkcije koja se može odabrati zasvijetli skupa s njim. A kad odaberete pomoćnu funkciju, unutarnji dio znaka pomoćne funkcije također zasvijetli i naziv odabrane funkcije se pojavljuje na zaslonu na 3 sekunde.

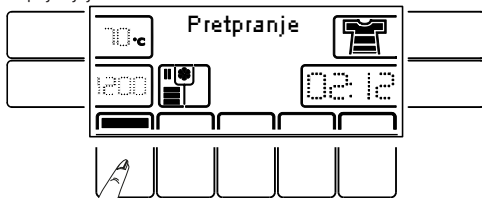

i Okvir znaka pomoćne funkcije koja se ne može odabrati s trenutnim programom ne svijetli. Kad pritisnete tipku takvih pomoćnih funkcija, na zaslonu se na 3 sekunde pojavljuje "Nepodesivo".



Također ostanu svijetliti okviri pomoćne funkcije koja je podesna za trenutni program nakon početka pranja. Možete odabrati ili opozvati pomoćne funkcije čiji su okviri osvijetljeni. Ako je ciklus pranja dosegao točku gdje ne možete odabrati pomoćnu funkciju, okvir funkcije se isključuje.

i Neke kombinacije se ne mogu odabrati skupa. Ako je druga pomoćna funkcija u sukobu s prvom, ranije odabranom prije pokretanja stroja, prva odabrana funkcija će biti opozvana a odabir druge pomoćne funkcije će ostati uključen. Na primjer, ako želite odabrati brzo pranje nakon odabira pretpiranja, pretpiranje će biti opozvano a brzo pranje će ostati uključeno.

i Pomoćna funkcija koja nije kompatibilna s programom se ne može odabrati. (Pogledajte "Tablica programa i potrošnje")

i Neki programi imaju pomoćne funkcije koje moraju raditi istodobno. Te se funkcije ne mogu opozvati. Okvir pomoćne funkcije neće biti osvijetljen, bit će osvijetljen samo unutrašnji dio.

• Pretpranje

Pretpranje se isplati samo za jako prljavo rublje. Nekorištenjem pretpranja ćete uštedjeti energiju, vodu, deterdžent i vrijeme.

• Dodatno ispiranje

Ova funkcija omogućava vašem stroju da izvrši dodatno ispiranje osim onog već izvršenog u glavnom pranju. Tako se može smanjiti rizik utjecaja minimalnih ostataka deterdženta na rublju na osjetljivu kožu (bebe, alergiji sklona koža, itd.).

• Protiv gužvanja

Ova funkcija manje gužva rublje tijekom pranja. Kretanje bubnja se smanjuje brzina centrifuge se ograničava da bi se spriječilo gužvanje. Osim toga, pranje se provodi na višoj razini vode.

• Noćni rad


Koristite ovaj program za pranje pamuka s manjom potrošnjom energije i tiho. Koraci centrifuge se prekidaju za tiho pranje i ciklus završava korakom zadržavanja izbacivanja vode. Nakon dovršetka programa, treba se pokrenuti ciklus centrifuge za centrifugu rublja.

4.13 Preporuke za količinu rublja i deterdženta

Količina napunjenog rublja se mjeri kad su vrata za punjenje otvorena i indikator napunjenosti prikazuje količinu.


Ovisno o odabranoj količini rublja, na zaslonu se prikazuje "Malo učinkovito", "Učinkovito" ili "Jako učinkovito".

Ove informacije nestaju kad se vrata za punjenje zatvore.

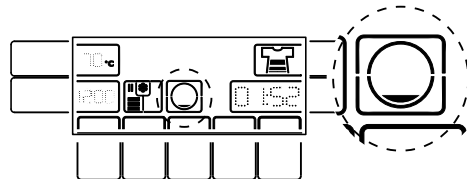

Indikator deterdženta prikazuje preporučenu količinu deterdženta prema odabranom programu, razinu prljavosti i količinu napunjenog rublja.

Jedna crta odgovara punoj čašici za mjerenje deterdženta u prahu koja je dostavljena s vašim proizvodom.

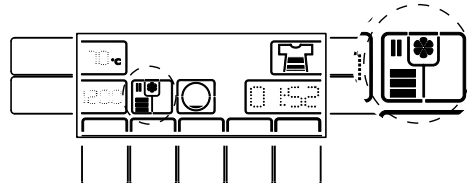

Ako koristite tekući deterdžent, slijedite količinu koju je preporučio proizvođač deterdženta na osnovi razini prljavosti.

i Preporučena količina deterdženta nije prikazana nakon početka programa.

Prikaz vremena

Vrijeme preostalo do dovršetka programa dok radi je prikazano kao "01:30" u formatu sata i minuta.


i Vrijeme programa može biti različito od vrijednosti u "Tablici programa i potrošnje" ovisno o tlaku vode, tvrdoći i temperaturi vode, sobnoj temperaturi, količini i vrsti rublja, odabranim dodatnim funkcijama i promjenama napona.

4.14 Vrijeme kraja

Pomoću funkcije **vrijeme kraja**, početak programa se pomoću funkcije odgođenog početka može odgoditi do 24 sata. Nakon pritiska na tipku **Vrijeme kraja**, prikazuje se procijenjeno vrijeme završetka programa. Ako se podesi **Vrijeme kraja**, oznaka **Vremena kraja** zasvijetli. Na zaslonu će se pojaviti **"Postavka vremena kraja"**. U međuvremenu tipka **Start / pauza** bljeska.



Da bi se uključila funkcija vremena kraja i da bi program završio na kraju određenog vremena, morate pritisnuti tipku **Start / pauza** nakon podešavanja vremena. Kad pritisnete tipku se na zaslonu pojavljuje **"Vrijeme kraja uključeno"**. Tipka **Start / pauza** prestaje bljeskati i ostaje stalno osvijetljena.

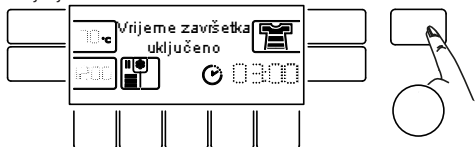

Ako želite opozvati funkciju vremena kraja, pritisćite tipku za vrijeme kraja dok se ne isključi indikator vremena kraja ili pritisnete tipku za **uključivanje / isključivanje** da isključite pa uključite stroj.



Ne koristite tekuće deterdžente kad uključujete funkciju vremena kraja! Postoji opasnost da će na odjeći ostati mrlje.

1. Otvorite vrata za punjenje, stavite rublje i deterdžent, itd.
2. Odaberite program za pranje, temperaturu, brzinu centrifuge i po potrebi pomoćne funkcije.
3. Postavite vrijeme kraja po svom izboru pritiskom na tipku **vrijeme kraja**. Oznaka **vremena kraja** zasvijetli.
4. Pritisnite tipku za **početak/pauzu**. Odbrojavanje vremena počinje. ":" znak u sredini vremena kraja na zaslonu počinje bljeskati.




Tijekom vremena odbrojavanja vremena kraja, može se dodavati još rublja. Na kraju odbrojavanja, znak za vrijeme kraja nestaje, ciklus pranja počinje i vrijeme odabranog programa se pojavljuje na zaslonu.




Kad odabir vremena kraja bude gotov, vrijeme koje se pojavljuje na zaslonu se sastoji od vremena kraja plus trajanje odabranog programa.

4.15 Uključivanje programa

1. Pritisnite tipku **Start/Pauza** da biste uključili program.
2. Tipka **Start / pauza** koja bljeska sada počinje stalno svijetliti, označavajući da je program započeo. Na zaslonu se na 3 sekunde pojavljuje **"Program počinje"**.

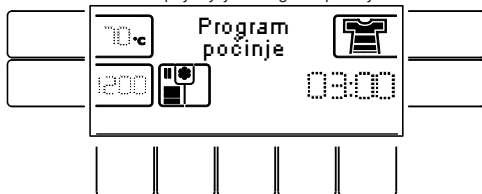

3. Vrata za punjenje su zaključana. Kad se vrata zaključavaju, na zaslonu se pojavljuje **"Zaključavanje vrata"**.

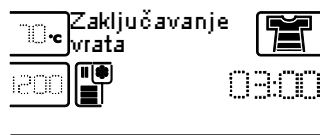

4. Korak programa je označen na zaslonu.



4.16 Zaključavanje vrata za punjenje

Na vratima za punjenje stroja postoji sustav za zaključavanje koji sprečava otvaranje vrata kad razina vode nije odgovarajuća.

Kad su vrata za punjenje zaključana, na zaslonu se pojavljuje **"Zaključana vrata"**.

4.17 Promjena odabira nakon što je program započeo

Dodavanje rublja nakon početka programa:


Ako je razina vode u stroju odgovarajuća kad pritisnete tipku **Start / pauza**, na zaslonu će se prikazati **"Otvaranje vrata"**.



Ako razina vode u stroju nije odgovarajuća kad pritisnete tipku Start / pauza, zaslon će prikazati da su vrata za punjenje zaključana.

Prebacivanje stroja na pasivni režim rada:

Pritisnite tipku Start/Pauza da biste prebacili vaš stroj na pasivni režim. Okvir oko tipke **Start / pauza** počne bljeskati. Na zaslonu će se pojaviti "Na čekanju".

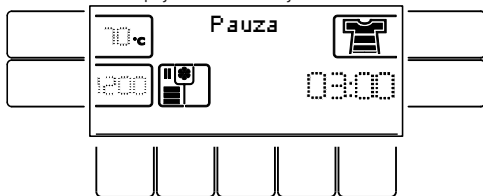

Promjena odabira programa nakon početka programa:

Promjena programa nije dopuštena kad trenutni program radi.


Ako okrenete tipku **Odabir programa** dok program radi, na zaslonu se pojavljuje "Za promjene se prebaci na pasivno". Možete odabrati novi program nakon prebacivanja trenutnog programa na pasivni režim.



Promjena pomoćne funkcije, brzine i temperature



Ovisno o tome do kojeg je koraka došao program, možete opozvati ili uključiti pomoćne funkcije; pogledajte "Odabir pomoćne funkcije".

Također možete promijeniti postavke brzine i temperature; pogledajte "Odabir brzine centrifuge" i "Odabir temperature".

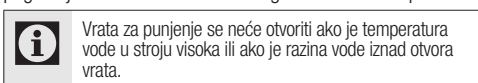


4.18 Zaključavanje zbog djece

 Koristite zaključavanje zbog djece da biste spriječili djecu da diraju proizvod. Tako ćete promijeniti bilo kakvu promjenu programa.

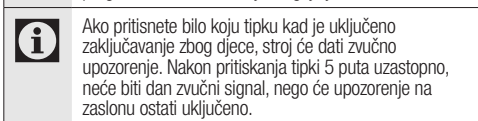

Za aktiviranje zaključavanja zbog djece:

 Pritisnite i držite tipke 2. i 4. pomoćne funkcije na 3 sekunde. Kad odbrojavanje na zaslonu "Zaključavanje zbog djece 3-2-1" bude gotovo, na zaslonu se pojavljuje "Zaključavanje zbog djece uključeno". Kad ovo upozorenje bude prikazano, možete otpustiti 2. i 4. tipku pomoćne funkcije.




Za deaktiviranje zaključavanja zbog djece:

Pritisnite i držite tipke 2. i 4. pomoćne funkcije na 3 sekunde. Kad odbrojavanje na zaslonu "Zaključavanje zbog djece 3-2-1" bude gotovo, na zaslonu se pojavljuje "Zaključavanje zbog djece isključeno".



4.19 Opoziv programa

Program je opozvan ako se stroj isključi i ponovno uključi. Pritisnite i držite tipku **Uključeno / Isključeno** na 3 sekunde. Nakon odbrojavanja, kad "Opoziv 3-2-1" na zaslonu bude gotov, stroj se isključuje.

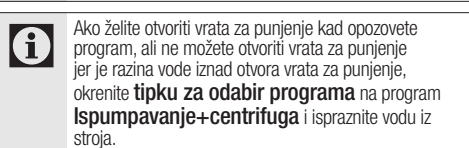

4.20 Kraj programa

Kad je program gotov, na zaslonu se pokazuje "Rublje se može izvoditi".

Ako ne pritisnete nijednu tipku 2 minute, stroj će se prebaciti na pasivni režim. Zasloni i svi indikatori su isključeni. Samo okvir **Odabira programa** nastavlja bljeskati.

Ako pritisnete bilo koju tipku ili okrenete tipku za **Odabir programa** kad je stroj na pasivnom režimu, dovršeni programi koraka će se pojaviti na zaslonu.


4.21 Postavka omiljenog (favori) programa

Možete stvoriti omiljeni program spremanjem često korištenog programa i drugih postavki. Koristite ovu funkciju kad želite brzo odabrati iste postavke koje koristite za rublje koje redovito perete.

Najdraži program će ostati tvornički postavljeni program dok ne stvorite novu postavku omiljenog programa.

Za spremanje omiljenog programa:


1. Odaberite željeni program, temperaturu, brzinu centrifuge, razinu prljavosti i pomoćnu funkciju.
2. Držite tipku **Omiljeni pr.** pritisnute 3 sekunde.
3. Na zaslonu se pojavljuje odbrojavanje "Spremanje omiljenog pr. 3-2-1".

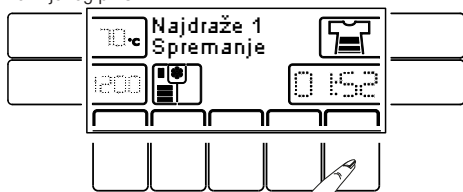

Ako spremanje nije uspješno, na zaslonu se pojavljuje "Omiljeni pr. nije spremljen".

Za odabir omiljenog programa:

1. Pritisnite tipku **Najdraži pr.**. Na zaslonu se pojavljuje "Omiljeni pr. odabran".
2. Program i druge postavke spremljene kao omiljeni program se pojavljuju na zaslonu.
3. Pritisnite tipku **Start/Pauza** da biste uključili omiljeni program.

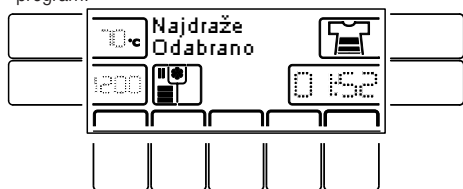

4.22 Ulazak u izbornik postavki

U izborniku Postavke možete izvršiti sljedeće operacije:

- Promjena odabira jezika,
- Promjena postavke osvjjetljenja zaslona,
- Isključivanje i uključivanje zvuka,
- Vraćanje tvorničkih postavki.

 
Pritisnite tipku za **Podešavanje programa i Podešavanje brzine centrifuge** istodobno na 3 sekunde da uđete u izbornik Postavke. Na zaslonu se pojavljuje "Odabir jezika". Za navigaciju po izbornicima koristite tipke **Razina prljavosti i Podešavanje temperature**.

Promjena odabira jezika

1. Pritisnite tipku za **Podešavanje programa i Podešavanje brzine centrifuge** istodobno na 3 sekunde da uđete u izbornik Postavke. "Odabir jezika" je prvi izbornik koji se pojavljuje na zaslonu.



2. Okrećite tipku **Odabir programa** dok se željeni jezik ne pojavi na izborniku Odabir jezika.




3. Pritisnite tipku prazne kućice u donjem desnom kutu zaslona kad je prikazan željeni jezik. Prazna kućica se ispuni i na zaslonu se pojavi "Jezik postavljen".



Promjena postavke osvjjetljenja zaslona

1. Pritisnite tipku za **Podešavanje programa i Podešavanje brzine centrifuge** istodobno na 3 sekunde da uđete u izbornik Postavke. Pritisnite razinu prljavosti ili tipku temperature da otvorite izbornik "Osvjetljenje".

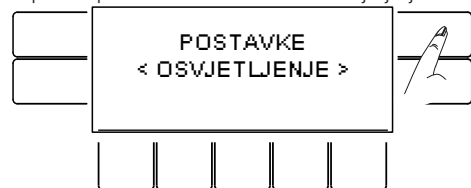


2. Okrećite tipku **Odabir programa** dok se željena opcija osvjjetljenja ne pojavi na izborniku Osvjetljenje.
3. Pritisnite tipku prazne kućice u donjem desnom kutu zaslona kad je prikazana željena razina osvjjetljenja. Prazna kućica se ispuni i na zaslonu se pojavi "Osvjetljenje postavljeno".



Isključivanje i uključivanje zvuka

1. Pritisnite tipku za **Podešavanje programa** i

Podešavanje brzine centrifuge istodobno na 3 sekunde da uđete u izbornik Postavke. Pritisnite tipku **Razina prljavosti** ili **Podešavanje temperature** da otvorite izbornik "Postavka zvuka".

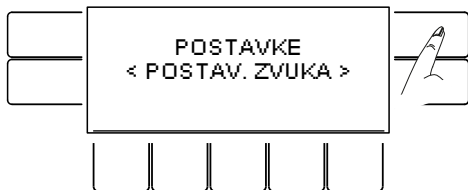

2. Okrećite tipku **Odabir programa** dok se željena opcija zvuka ne pojavi na izborniku Podešavanje zvuka.
3. Ako želite ponovno uključiti zvuk, pritisnite tipku prazne kućice u donjem desnom kutu na zaslonu kad se odabere "POSTAVKA ZVUKA UKLJ." Prazna kućica se ispuni i na zaslonu se pojavi "Zvuk postavljen".
4. Ako želite isključiti zvuk, pritisnite tipku prazne kućice u donjem desnom kutu na zaslonu kad se odabere "POSTAVKA ZVUKA ISKLJ." Prazna kućica se ispuni i na zaslonu se pojavi "Zvuk isključen".

Vraćanje tvorničkih postavki

Kad se vraćaju tvorničke postavke:

- Jezik prikaza se vraća na prvi jezik koji ste odabrali kad ste prvi put uključili stroj;
 - Osvjetljenje je postavljeno na maksimalnu razinu,
 - Zvuk je isključen,
 - **Odabir omiljenog programa** je vraćen na tvorničke postavke.
1. Pritisnite tipku za **Podešavanje programa** i **Podešavanje brzine centrifuge** istodobno na 3 sekunde da uđete u izbornik Postavke. Pritisnite tipku razine prljavosti ili temperature da otvorite izbornik "TVORNIČKE POSTAVKE".



2. Za vraćanje tvorničkih postavki, okrećite tipku za **Odabir programa** dok se na zaslonu ne pojave "Tvorničke postavke".




3. Pritisnite tipku prazne kućice u donjem desnom kutu zaslona. Tvorničke postavke će biti vraćene.

5 Održavanje i čišćenje

Vijek trajanja proizvoda se produžava i problemi do kojih često dolazi se smanjuju ako se redovito čisti.

5.1 Čišćenje ladice za deterdžent

Čistite ladicu deterdženta redovito (svakih 4-5 ciklusa pranja) kako je prikazano dolje da bi se na vrijeme spriječilo nakupljanje praška deterdženta.

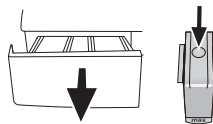

1. Pritisnite točku na sifonu u odjeljku za omekšivač i vucite prema sebi dok ne izvadite odjeljak iz stroja.



Ako se u odjeljku za omekšivač počne nakupljati više mješavine vode i omekšivača nego obično, sifon se mora očistiti.

2. Operite ladicu raspršivača i sifon u umivaoniku s puno mlake vode. Nosite zaštitne rukavice ili koristite odgovarajuću četku da biste izbjegli dodirivanje ostataka u ladici tijekom čišćenja.
3. Nakon čišćenja, vratite ladicu nazad na mjesto i pazite da je na mjestu.

5.2 Čišćenje vrata za punjenje i bubnja

U stroju se s vremenom mogu nakupiti ostaci omekšivača, deterdženta i prljavštine i uzrokovati neugodne mirise i pritužbe kod pranja. Da biste izbjegli to, koristite program za **čišćenje bubnja**. Ako vaš stroj nema program za **čišćenje bubnja**, koristite program Pamuk 90 i odaberite i pomoćne funkcije **Dodatna voda** ili **dodatno ispiranje**. Pokrenite program bez bilo kakvog rublja u stroju. Prije pokretanja programa, stavite najviše 100g praška protiv kamenca u glavni odjeljak za pranje (odjeljak br. 2). Ako je sredstvo protiv kamenca u obliku tablete, stavite tabletu u prelinac br. 2. Osušite unutrašnjost donjeg dijela čistom krpom nakon završetka programa.




Ponavljajte postupak čišćenja bubnja jednom u svaka 2 mjeseca.



Koristite sredstvo protiv kamenca koje je podesno za perilice.

Nakon svakog pranja, pazite da u bubnju nema stranih tijela.

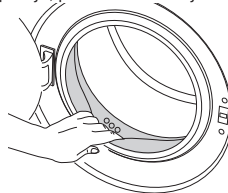

Ako su rupe prikazane na slici dolje začepljene, otvorite rupe pomoću čačkalice.



Strane tvari od metala će u bubnju uzrokovati mrlje od hrđe. Očistite mrlje na bubnju pomoću sredstva za čišćenje za nehrđajući čelik. Nikada nemojte koristiti čeličnu vunu ili jastučić od žice.



UPOZORENJE: Nikada nemojte koristiti spužvu ili materijale za ribanje. To će oštetiti obojane i plastične površine.


5.3. Čišćenje kućišta i upravljačke ploče.

Obrišite po potrebi kućište uređaja vodom sa sapunicom ili nekorozivnim blagim deterdžentima u gelu i obrišite suhom krpom.

Za brisanje upravljačke ploče, koristite samo meku i vlažnu krpu.

5.4. Čišćenje filtra za dovod vode.

Na kraju svakog ventila za dovod vode na stražnjoj strani stroja i na kraju svakog crijeva za dovod vode se kod spoja nalazi se filter. Ti filteri sprječavaju ulazanje stranih tijela i prljavštine iz vode u stroj. Filteri se trebaju čistiti kad se isprljaju.

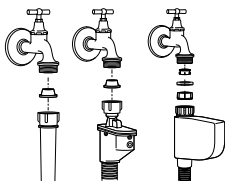

1. Zatvorite pipe.
2. Uklonite matice na crijevima za dovod vode da biste došli do tih filtera na ventilima za dovod vode. Očistite ih odgovarajućom četkom. Ako su filteri jako prljavi, možete ih izvući pomoću kliješta i očistiti ih.
3. Izvadite filtre na ravnim krajevima crijeva za dovod vode skupa s brtvama i dobro ih očistite pod tekućom vodom.
4. Pažljivo vratite brtvlja i filter na njihova mjesta i zavrnite matice crijeva rukom.

5.5. Odljev sve preostale vode i čišćenje pumpe filtra

Sustav filtera u vašem stroju sprječavaju ulazak krutih predmeta kao što su gumbi, kovanice i vlakna tkanine i začepljivanje propelera pumpe tijekom izbacivanja vode pranja. Na taj će se način voda izbaciti bez problema a vijek trajanja pumpe će se produljiti.

Ako Vaša perilica ne uspije izbaciti vodu, filter pumpe može biti začepljen. Filter se mora čistiti kad god je začepljen ili svaka 3 mjeseca. Da biste očistili filter pumpe morate izbaciti vodu.

Osim toga, prije transporta stroja (npr. kod selidbe u drugu kuću) i u slučaju zamrzavanja vode, voda se mora izbaciti do kraja.



UPOZORENJE: Strana tijela koja ostanu u filteru pumpe mogu oštetiti vaš stroj ili uzrokovati buku.

Da biste očistili prljavi filter i ispustili vodu:


1. Isključite perilicu s napajanja da biste prekinuli dovod el. energije.




UPOZORENJE: Temperatura vode u perilici se može popeti do 90 °C. Da biste izbjegli rizik od opekline, filter se mora očistiti kad se voda u stroju ohladi.

2. Otvorite poklopac filtra.

Ako se sastoji od dva dijela, pritisnite pločicu na kapici filtra prema dolje i povucite dio van prema vama.

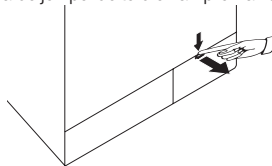


Ako je čep iz jednog dijela, povucite čep s obje strane na vrhu da ga otvorite.

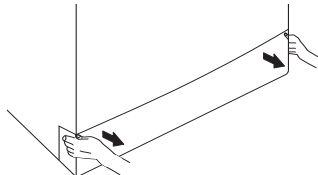

Možete skinuti poklopac filtra tako da lagano gurnete prema dolje pomoću plastičnog odvijača s vrškom, kroz otvor iznad poklopca filtra. Ne koristite alate s metalnim vrškom da uklonite poklopac.


3. Neki proizvodi imaju crijevo z odljev za hitne slučajeve, a neki nemaju. Slijedite dolje navedene korake da biste ispustili vodu.

Izbacivanje vode kad proizvod ima crijevo za odlijevanje za hitne slučajeve:

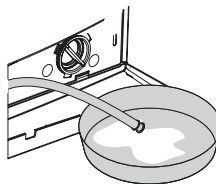


- a. Povucite s mjesta crijevo za odljev u hitnim slučajevima.
- b. Stavite veliki spremnik na kraj crijeva. Izbacite vodu u posudu povlačenjem čepa na kraju crijeva. Kad posuda bude puna, blokirajte kraj crijeva tako da vratite čep. Kad se posuda isprazni, ponovite gore navedeni postupak da biste nastavili s odlijevanjem vode iz stroja do kraja.
- c. Kad odlijevanje vode bude gotovo, zatvorite kraj tako da vratite čep i pričvrstite crijevo na mjesto.
- d. Okrenite filter pumpe da ga izvadite.

Izbacivanje vode kad proizvod nema crijevo za odlijevanje za hitne slučajeve:

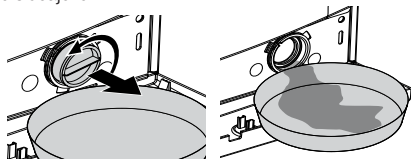




- a. Stavite veliku posudu ispred filtra da biste primili vodu koja teče iz filtra.
- b. Otpustite filtar pumpe (u smjeru obrnutom od kazaljki na satu) dok voda ne počne istjecati iz njega. Usmjerite vodu koja teče u posudu koju ste stavili ispred filtra. Uvijek držite krpu u blizini da možete pokupiti prolivenu vodu.
- c. Kad voda unutar stroja bude izbačena, izvadite filtar tako da ga okrenete do kraja.
4. Očistite sav talog u filtru, kao i vlakna oko propelera ako ih ima.
5. Stavite filtar.
6. Ako se čep filtra sastoji od dva komada, zatvorite čep filtra tako da pritisnete na pločicu. Ako je od jednog komada, stavite pločice u donjem dijelu na mjesta i pritisnite gornji dio da se zatvori.

6 Tehničke specifikacije

| | |
|--|--------------|
| Modeli | WMB 91465 |
| Maksimalni kapacitet suhog rublja (kg) | 9 |
| Visina (cm) | 84 |
| Širina (cm) | 60 |
| Dubina (cm) | 59 |
| Neto masa (±4 kg.) | 78 |
| Ulazna el. energija (V/Hz) | 230 V / 50Hz |
| Ukupna struja (A) | 10 |
| Ukupna snaga (W) | 2200 |
| Brzina centrifuge (maks, o/min.) | 1400 |
| Snaga kod pasivnog režima (W) | 0.60 |
| Snaga kod isključenog stanja (W) | 0.50 |
| Glavna šifra modela | 958 |
| Jednostruki / dvostruki ulaz vode | • / - |
|  Woolmark br.: | M1232 |

• Dostupno

| | |
|--|---|
|  | Tehničke specifikacije mogu biti promijenjene bez prethodne obavijesti da bi se poboljšala kvaliteta proizvoda. |
|  | Slike u ovom priručniku su shematske i možda neće odgovarati u potpunosti Vašem proizvodu. |
|  | Vrijednosti navedene na oznakama na stroju ili u pratećoj dokumentaciji su dobivene u laboratoriju u skladu s odgovarajućim standardima. Ovisno o uvjetima rada i okoline uređaja, vrijednosti mogu biti različite. |



Program za vunu na ovom stroju je odobrila “Tvrтка Woolmark” za pranje Woolmark proizvoda perivih u perilici, pod uvjetom da se proizvodi peru u skladu s uputama na etiketi proizvoda i uputama koje je objavio proizvođač ovog stroja.

| | | | | | | | | | | | | | |
|--|---|---|---|---|---|---|---|---|---|---|---|--|---|
|  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| Pamuk | Sintetika | Poplun | Košulja | Zaštita beba+ (BabyProtect+) | Pranje tamnog | Osvježi (osvježavanje) | Noćni rad | Pamuk eko | Ručno pranje | Vuna | Super kratko ekspresno | Svakodnevno ekspresno | Zavjese |
|  |  |  |  |  |  |  |  |  |  |  |  |  | |
| Ispiranje | Izbacivanje vode (Centrifuga + Pumpa) | Centrifuga | Pretpranje | Protiv gužvanja | Dodavno ispiranje | Omiljenog (favorit) | Temperatura | Odgoda vremena | Zaključavanje zbog djece | Uključi/ isključi | Početak Pauza | Odobir razine prijavosti | |

7 Rješavanje problema

Program se ne može uključiti ili odabrati.

- Perilica se možda prebacila u režim samozaštite zbog problema infrastrukture (kao što su napon, tlak vode, itd.).
>>> *Pritisnite i držite tipku Start / pauza na 3 sekunde da biste vratili stroj na tvorničke postavke. (Pogledajte "Opoziv programa")*

Voda u uređaju.

- Možda je u uređaju ostalo malo vode zbog kontrole kvalitete u proizvodnji. >>> *To nije kvar, voda ne šteti stroju.*

Stroj vibrira ili stvara buku.

- Stroj možda ne stoji ravno. >>> *Prilagodite nožicu da stroj stoji ravno.*
- Neka kruta tvar je možda ušla u filter pumpe. >>> *Očistite filter pumpe.*
- Transportni sigurnosni vijci nisu uklonjeni. >>> *Uklonite sigurnosne vijke za transport.*
- Količina rublja u perilici je možda premala. >>> *Dodajte još rublja u perilicu.*
- Stroj je možda pretovaren rubljem. >>> *Izvadite dio rublja iz stroja ili prerasporedite opterećenje rukom da biste ga ravnomjerno uravnotežili u stroju.*
- Stroj se možda naslanja na nešto tvrdo. >>> *Pazite da stroj nije naslonjen na nešto.*

Perilica je stala ubrzo nakon početka programa.

- Perilica može privremeno stati zbog pada napona. >>> *Nastavit će s radom kad se napon bude vratio na normalnu razinu.*

Vrijeme programa se ne odbrojava. (Na modelima s prikazom)

- Programator vremena može stati tijekom uzimanja vode. >>> *Oznaka programatora vremena neće odbrojavati dok uređaj ne uzme dovoljnu količinu vode. Perilica će čekati dok u njoj ne bude dovoljne količine vode da bi izbjegla slabe rezultate pranja zbog nedostatka vode. Oznaka programatora vremena će nastaviti s odbrojavanjem nakon toga.*
- Programator vremena može stati tijekom grijanja. >>> *Oznaka programatora vremena neće odbrojavati dok stroj ne dosegne odabranu temperaturu.*
- Programator vremena može stati tijekom centrifuge. >>> *Sustav za automatsko otkrivanje neuravnoteženog opterećenja može biti uključen zbog neuravnotežene raspodjele rublja u bubnju.*
- Centrifuga ne radi kad rublje nije raspodijeljeno ravnomjerno u bubnju da bi se spriječilo oštećenje stroja i njegove okoline. Rublje se treba ponovno preraspodijeliti i ponovno uključiti centrifugu.

Iz ladice za deterdžent izlazi pjena.

- Korišteno je previše deterdženta. >>> *Pomiješajte 1 žlicu omekšivača i ½ litre vode i ulijte u glavni odjeljak za pranje u ladici za deterdžent.*
- Stavite deterdžent u stroj podesan za programe i maksimalno punjenje kako je označeno u "Tablici programa i potrošnje". Kad koristite dodatne kemikalije (sredstva za uklanjanje mrlja, bjelila itd), smanjite količinu deterdženta.

Rublje ostaje mokro na kraju programa

- Možda je nastao višak pjene i možda se uključio automatski sustav za apsorpciju pjene zbog uporabe previše deterdženta. >>> *Koristite preporučenu količinu deterdženta.*
- Centrifuga ne radi kad rublje nije raspodijeljeno ravnomjerno u bubnju da bi se spriječilo oštećenje stroja i njegove okoline. Rublje se treba ponovno preraspodijeliti i ponovno uključiti centrifugu.



UPOZORENJE: Ako ne možete riješiti problem iako slijedite upute u ovom dijelu, konzultirajte se s vašim dobavljačem ili ovlaštenim serviserom. Nikada nemojte sami pokušati popraviti proizvod koji ne radi.